



Simple Voicemail Quick User Guide

To retrieve you messages:

Pick up the phone or press the speakerphone button. Dial * 383. Your messages will be played back.

Then press:

- 1 to repeat a message
- 2 to skip to the next message
- 3 to delete the message

To record a personal greeting:

Pick up the phone or press the speakerphone button. Dial * 381 and record after the tone. Once you have finished recording press the auto dial/store button.

To setup a call forward to your Voicemail box so people can leave a message.

- From your handset dial *710 5 591 # for busy no answer. (busy/no answer is when your phone is engaged or after 10 seconds of ringing)
- From your handset dial *710 2 591# for all calls to be forwarded without ringing.

To turn your divert off completely

- Dial *7100.
 - Your phone will ring until answered or the caller hangs up. No message can be left for you.
-



Simple Voicemail Quick User Guide

To retrieve you messages:

Pick up the phone or press the speakerphone button. Dial * 383. Your messages will be played back.

Then press:

- 1 to repeat a message
- 2 to skip to the next message
- 3 to delete the message

To record a personal greeting:

Pick up the phone or press the speakerphone button. Dial * 381 and record after the tone. Once you have finished recording press the auto dial/store button.

To setup a call forward to your Voicemail box so people can leave a message.

- From your handset dial *710 5 591 # for busy no answer. (busy/no answer is when your phone is engaged or after 10 seconds of ringing)
- From your handset dial *710 2 591# for all calls to be forwarded without ringing.

To turn your divert off completely

- Dial *7100.
- Your phone will ring until answered or the caller hangs up. No message can be left for you.