

**(g) If the player malfunctions**

If the player or another unit equipped with the player malfunctions, your audio system will display one of the four following error messages.

If **"WAIT"** appears on the display, it indicates that the inside of the player unit may be too hot due to the very high ambient temperature. Remove the disc from the player and allow the player to cool down.

If **"ERROR 1"** appears on the display, it indicates that the disc is dirty, damaged, or it was inserted upside down. Clean the disc or insert it correctly.

If **"ERROR 3"** or **"ERROR 4"** appears on the display, it indicates there is trouble inside the system. Eject the disc.

If the malfunction is not rectified, take your vehicle to any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

**Steering pad switches**

The steering pad switches are installed on the left side of the steering wheel.

**"MODE" switch:** Push the "MODE" switch to select an audio mode. Each push changes the mode sequentially if the desired mode is ready to use. When you push the switch briefly with the audio system turned off, the audio system turns on. To turn off the audio system, push the switch and hold it until you hear a beep.

**"VOL" switches:** Push " $\blacktriangle$ " to increase the volume and " $\blacktriangledown$ " to decrease the volume. The volume continues to increase or decrease while the switch is being pressed.

**"SET" switch:** Push the "SET" switch to change to the preset volume. To preset the volume, adjust the volume and push the switch until you hear a beep.

**" $\blacktriangledown$ " or " $\blacktriangle$ " switch:** The function in each mode is shown below.

**(a) When the radio mode is selected**

Push this switch briefly to select a station that you assigned to a switch on the audio system.

Push this switch and hold it until you hear a beep. The radio will begin seeking up or down for a station and stop on reception.

**(b) When the "TAPE" mode is selected**

Push this switch briefly for automatic program selection. In automatic program selection, you can skip up to 9 programs at a time. For details, see page 166 for details.

Push this switch until you hear a beep to fast forward or rewind the tape. To stop fast forwarding or rewinding, push the same side on the switch.

**(c) When the "CD" mode is selected**

Push this switch briefly to select a desired track.

To select a desired disc, push and hold this switch until you hear a beep.



**Operate the steering pad switches with due care while you are driving to avoid accidents.**

**Audio system operating hints****NOTICE**

To ensure correct audio system operations:

- Be careful not to spill beverages over the audio system.
- Do not put anything other than a cassette tape or compact disc into the cassette tape slot or compact disc slot.
- The use of a cellular phone inside or near the vehicle may cause a noise from the speakers of the audio system which you are listening to. However, this does not indicate a malfunction.

**Radio reception**

FM broadcasts have a range of about 40 km or 25 miles. When driving away from a station, you may have to fine-tune your radio and turn up the volume as the station gets weaker. Because FM uses a line-of-sight signal, tall buildings or hills may sometimes block reception. These are all normal characteristics of FM reception and do not indicate any problem with the radio itself.

**Caring for your cassette player and tapes**

For the best performance for your cassette player and tapes:

Clean the tape head and other parts regularly.

- A dirty tape head or tape path can decrease sound quality and tangle your cassette tapes. The easiest way to clean them is by using a cleaning tape. (A wet type is recommended.)