



main to go
shirking line

trim to start on
chamney breast edge
1/2" inside it


[CARPET]

[MISPL]

trim starts

no trim just
width



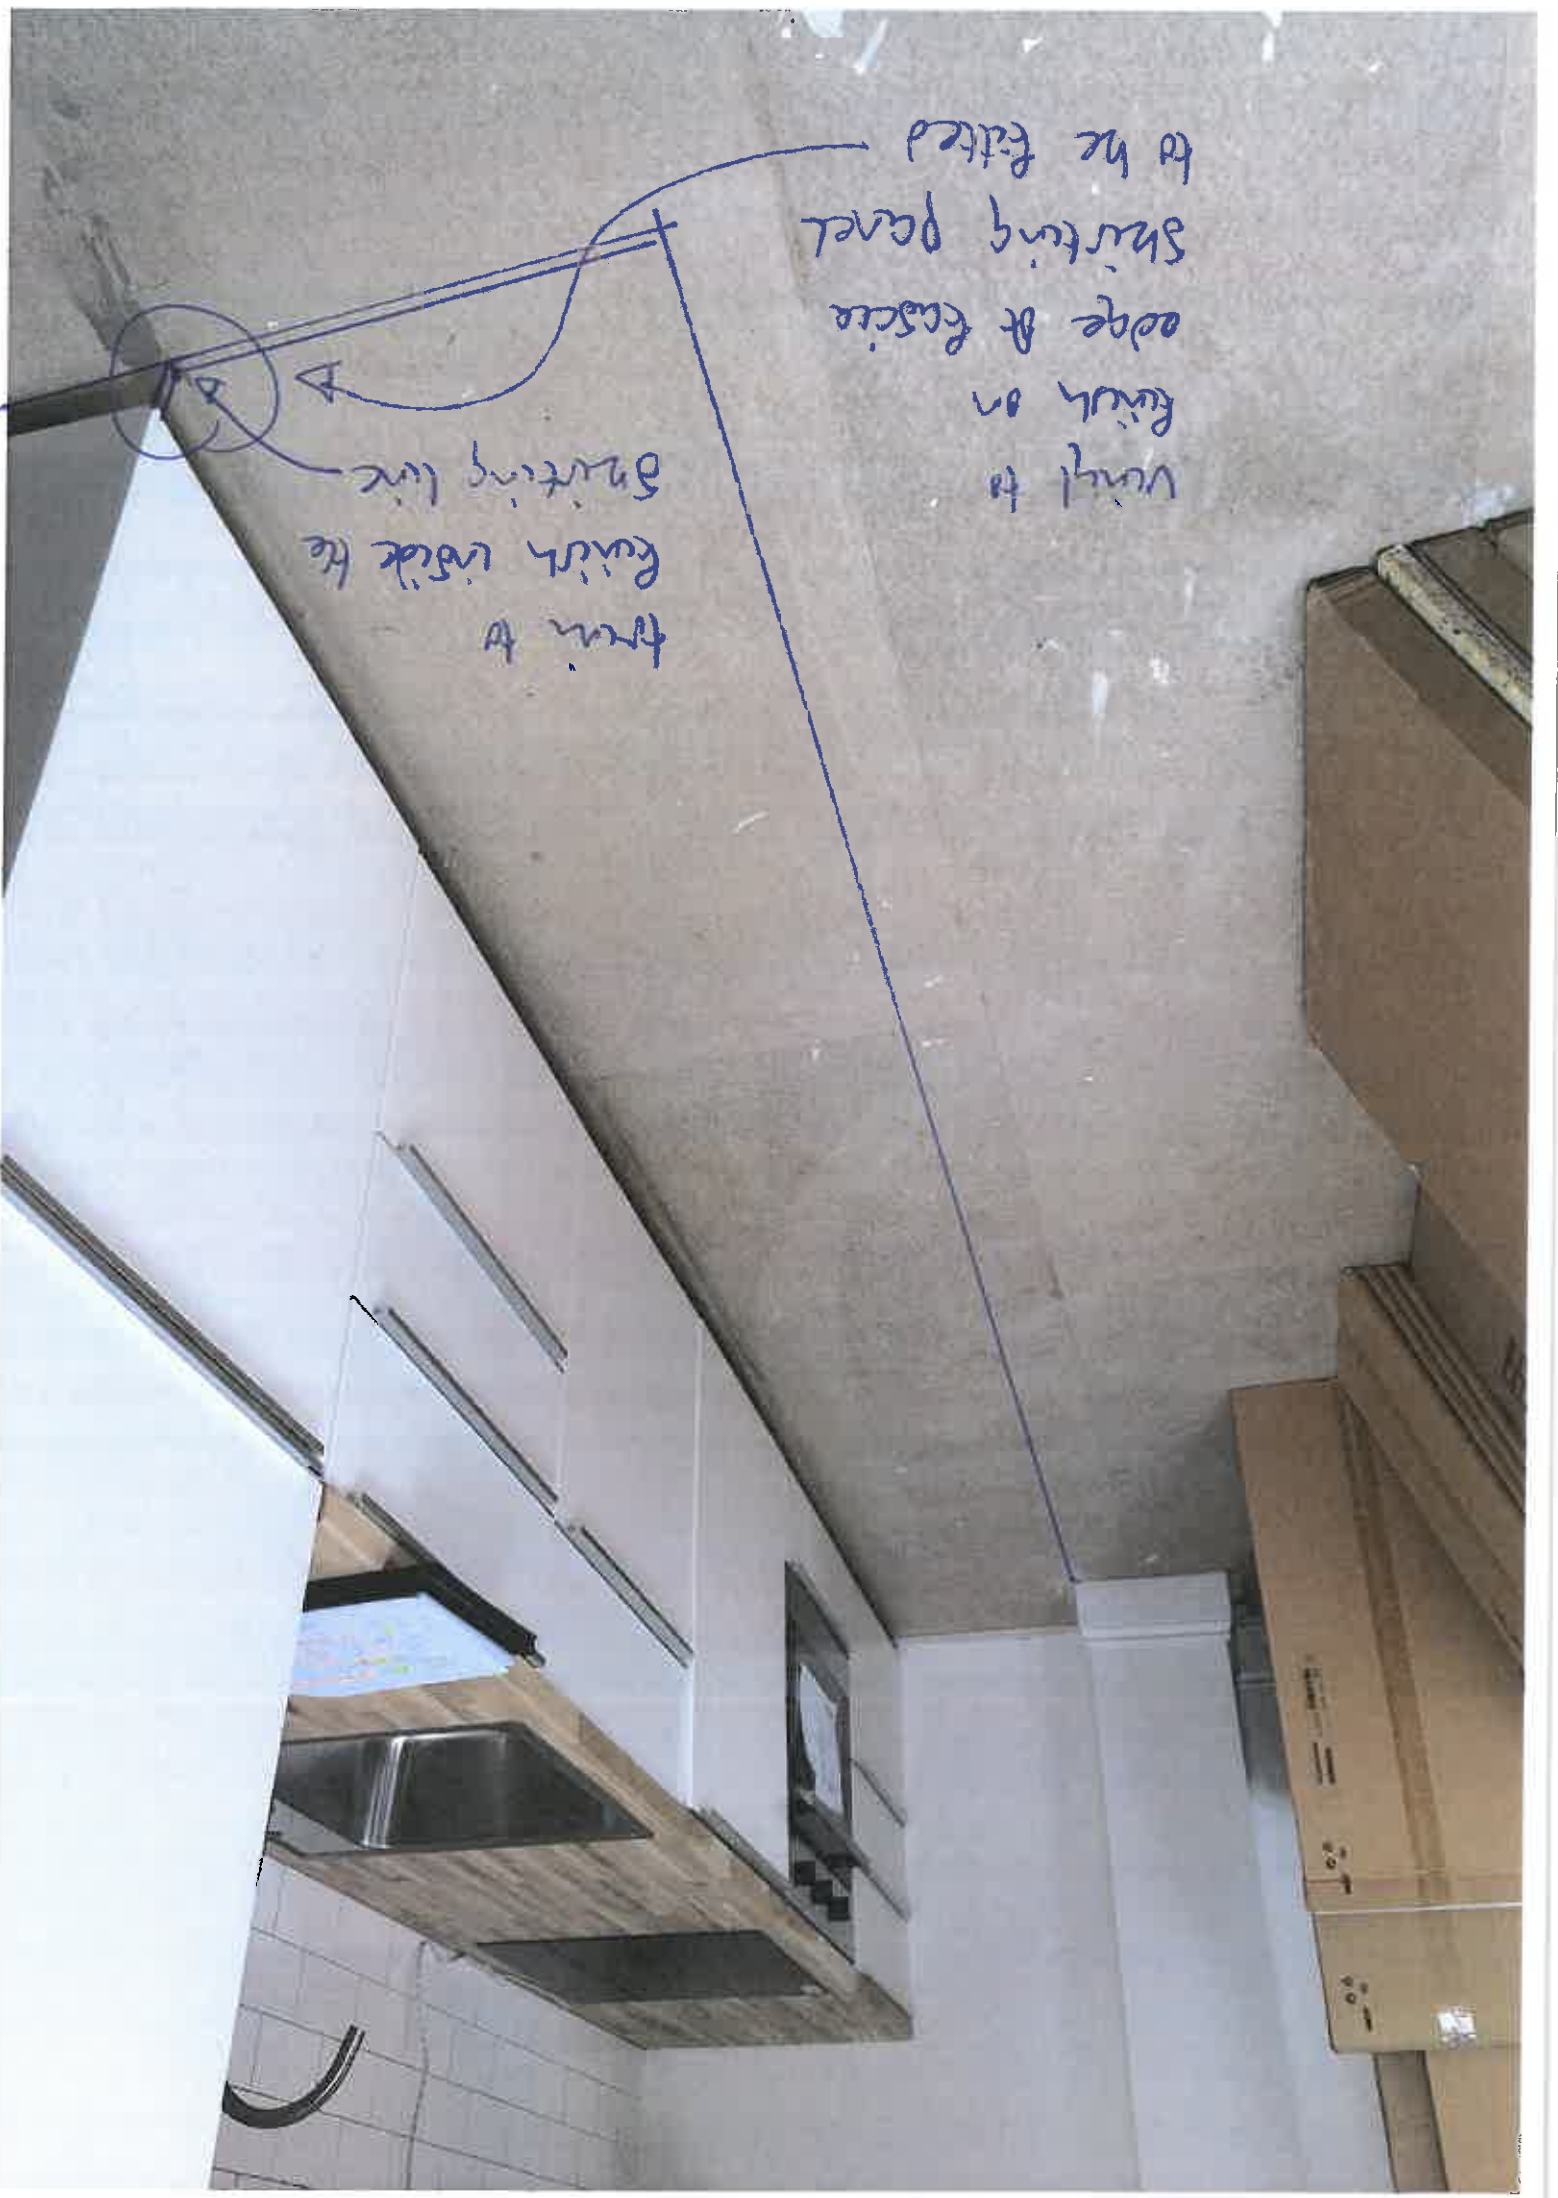

from the
finish inside the
shirting line

will be
finish on
edge of fascia
shirting panel
to be fitted



VORHIL

no trim
just
width →

CHALLET

trim starts

trim to start on
chamfer break
edge not inside it

