

UNDERFLOOR HEATING.

CIMER INSTRUCTIONS ~~NO NAILS~~

- NO NAILS, NO STAPLES,
ONLY GLUE.

Job No: RIG614

Name: BELA


Address: 8 PARKWAY

SW 20.

Tel:

Sheet: 1 of 2.

TOP.

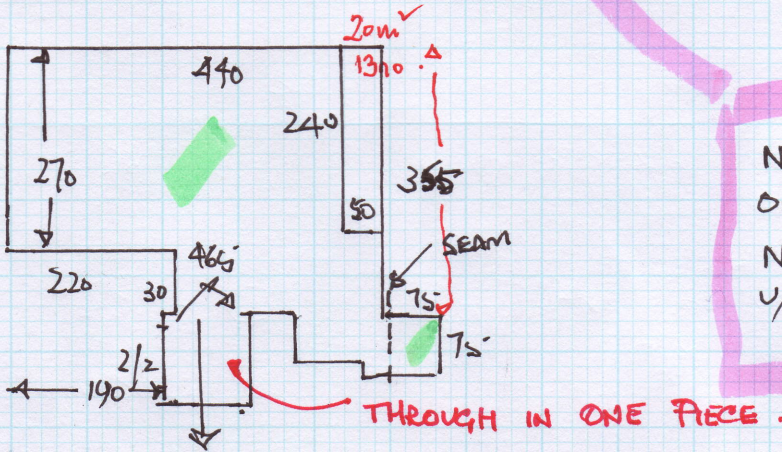


NO NAILS TO FLAT AREAS
ONLY STAIRS.
NO STAPLES TO SECURE
U/LAY. USE SPRAY ADHESIVE.

- 2 x 45 x 65
- W1 54 x 74
- W2 57 x 100
- W3 83 x 70
- W4 55 x 66
- 1 x 45 x 66
- W5 54 x 74
- W6 57 x 100
- W7 83 x 70
- W8 55 x 66
- 2 x 45 x 66
- 1 x B/N

5m²
20m²

- RAMP x 1
- 2/2 x 2.
- D/N x 3.
- STICK GR. x 43.
- STRS GR. x 36.
- U/Lay 65m²
- TAPE 17 lin m.


FIRST

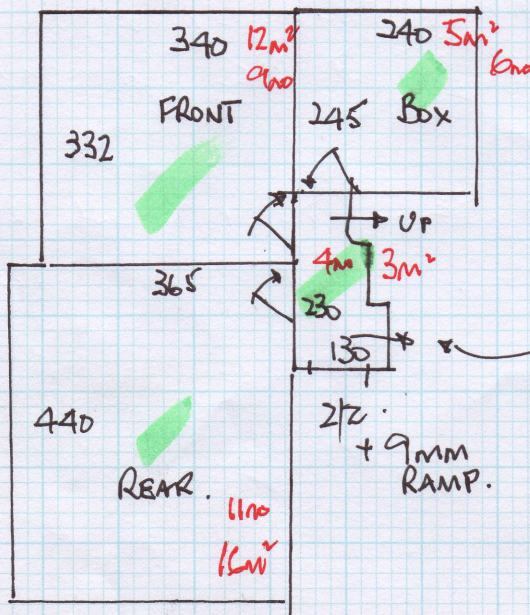

- 3 x 40 x 80 (60)
- W9 60 x 70
- W10 65 x 70
- W11 60 x 60
- 7 x 40 x 60

4m²
15m²

Job No: R16614
 Name: BELA.
 Address: 8 PARKWAY
 SW20.
 Tel:
 Sheet: 2 of 2.

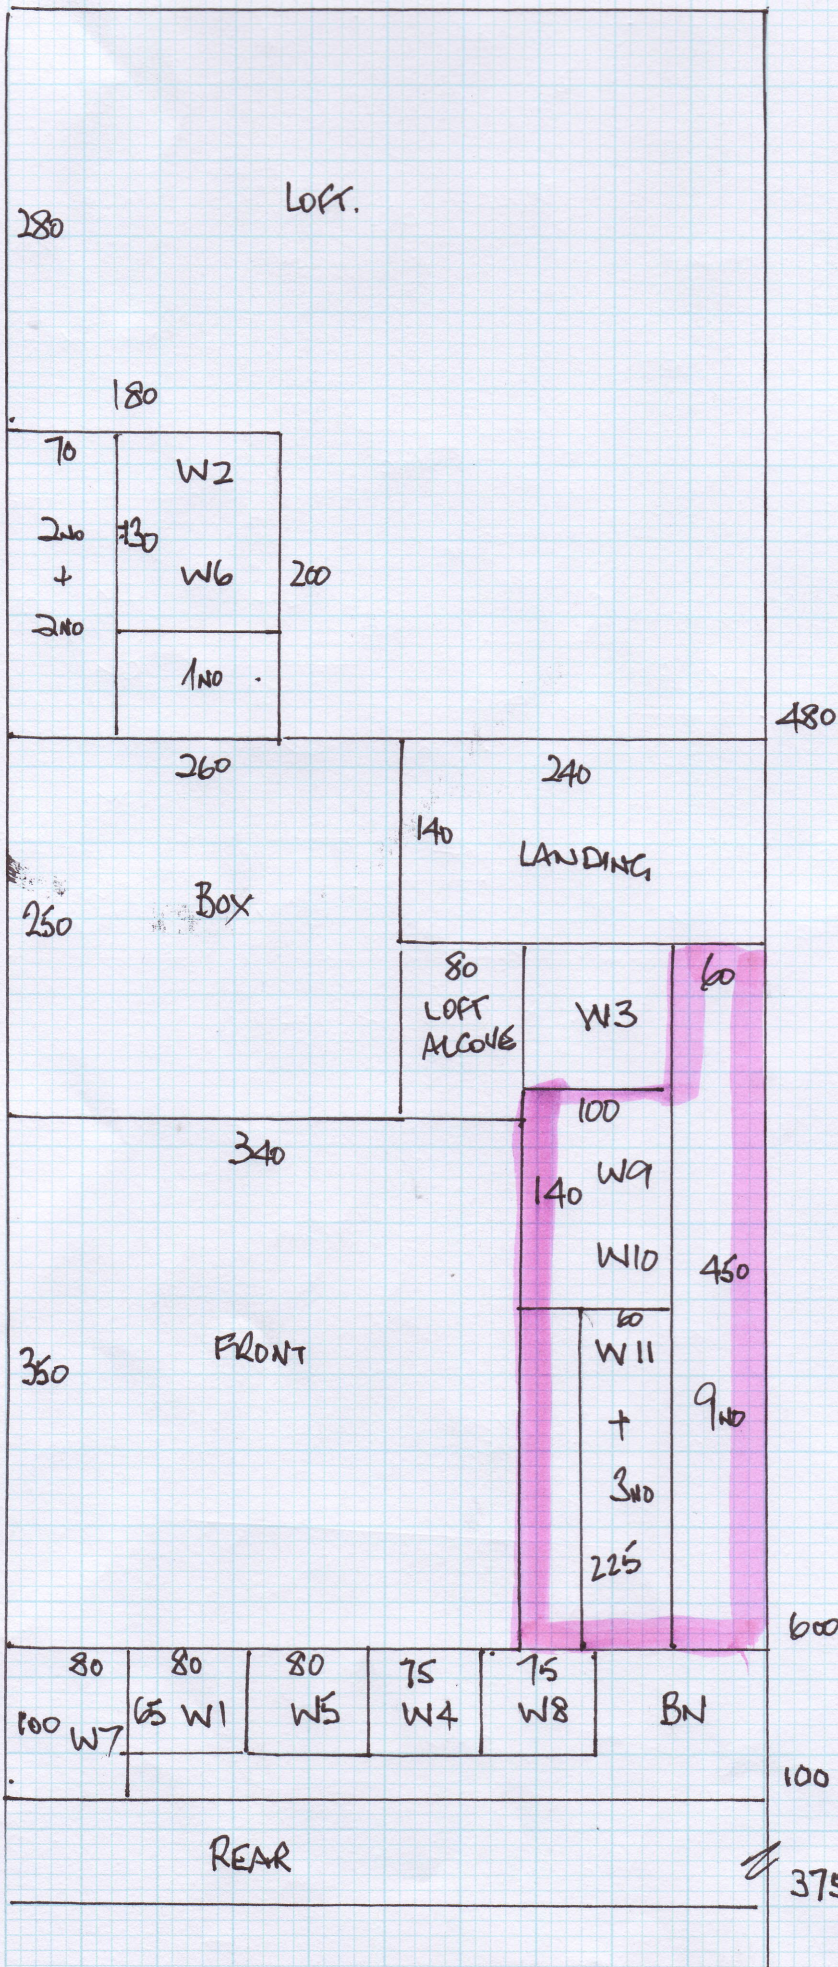

CUTS :

480 x 500
 600 x "
 100 x "
 375 x "

 1555 x 500 =
 77.75m²

Rooms 57m²
 l/s. 21m².

CUT THIS SECTION
 ON FRI. 14 MAR.
 CUT DOWN RUNNERS
 AND TEMPLATE W9
 & W10.

FIT ALL AREAS ON
 MON 17TH. MAR.
 FIT RUNNERS ON
 FRI 21ST MAR.