

455
85

540

*


NO BARS - SEAM DOORS.

TDP.


R15477.
J & C BENNETT.
9 BELVEDERE DR.
SW19.

1 3

- ✓ 5 x 42 x 91.
 - ✓ 1/4 L 115 x 92
 - 5/4 ✓ 9 x 42 x 92
 - ✓ 1 x BN.
- 7m²

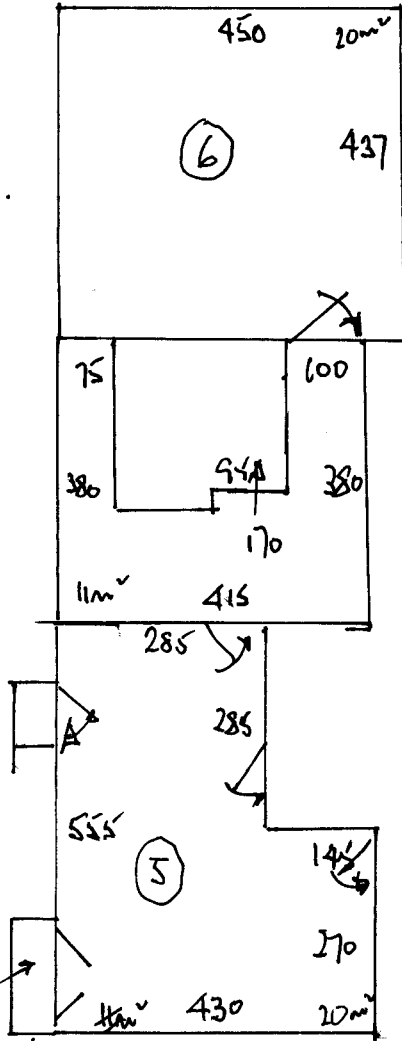

FIRST:

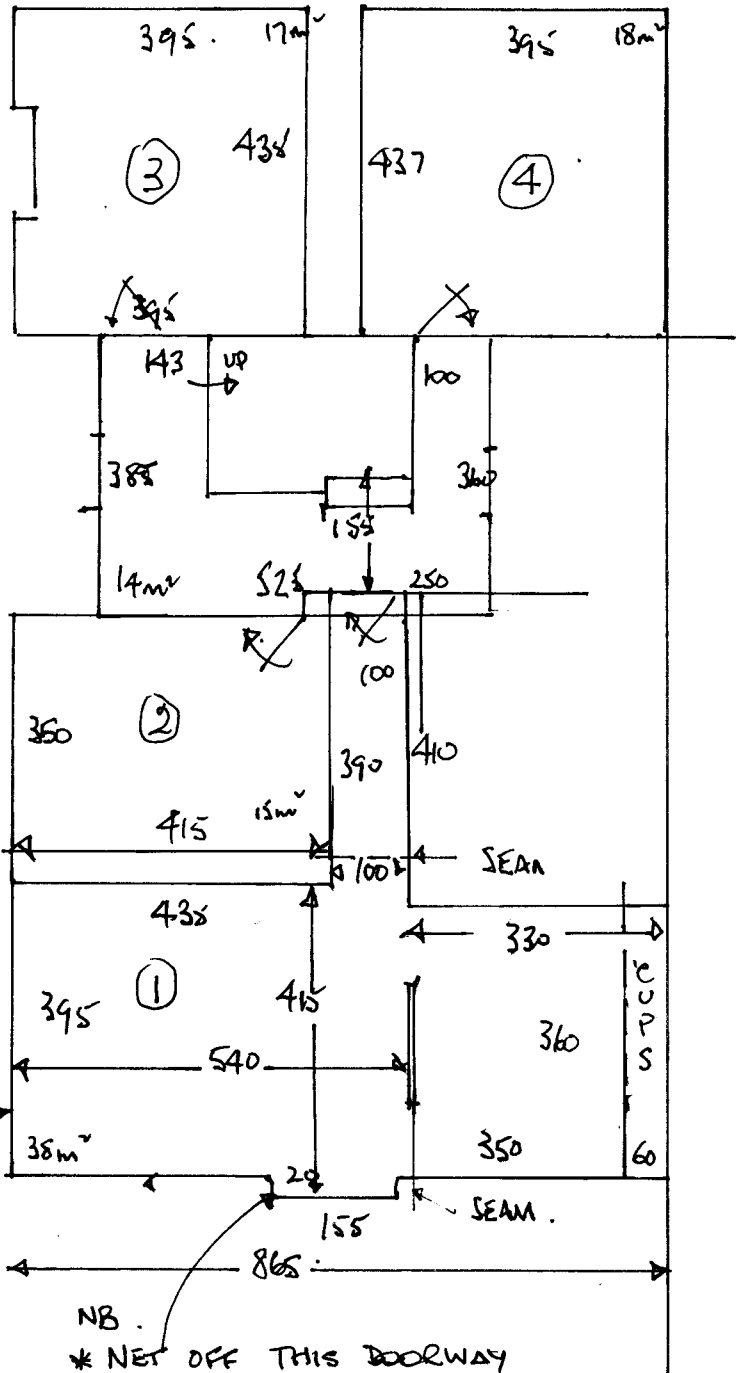


- ✓ 5 x 42 x 92
- ✓ 1/4 L 115 x 93
- ✓ 9 x 42 x 92.
- ✓ BN1 35 x 105
- 20 x 115
- ✓ BN2 75 x 125
- 20 x 135.

8.50m²

NB
* NET OFF THIS WALL

NB.
* NET OFF THIS DOORWAY

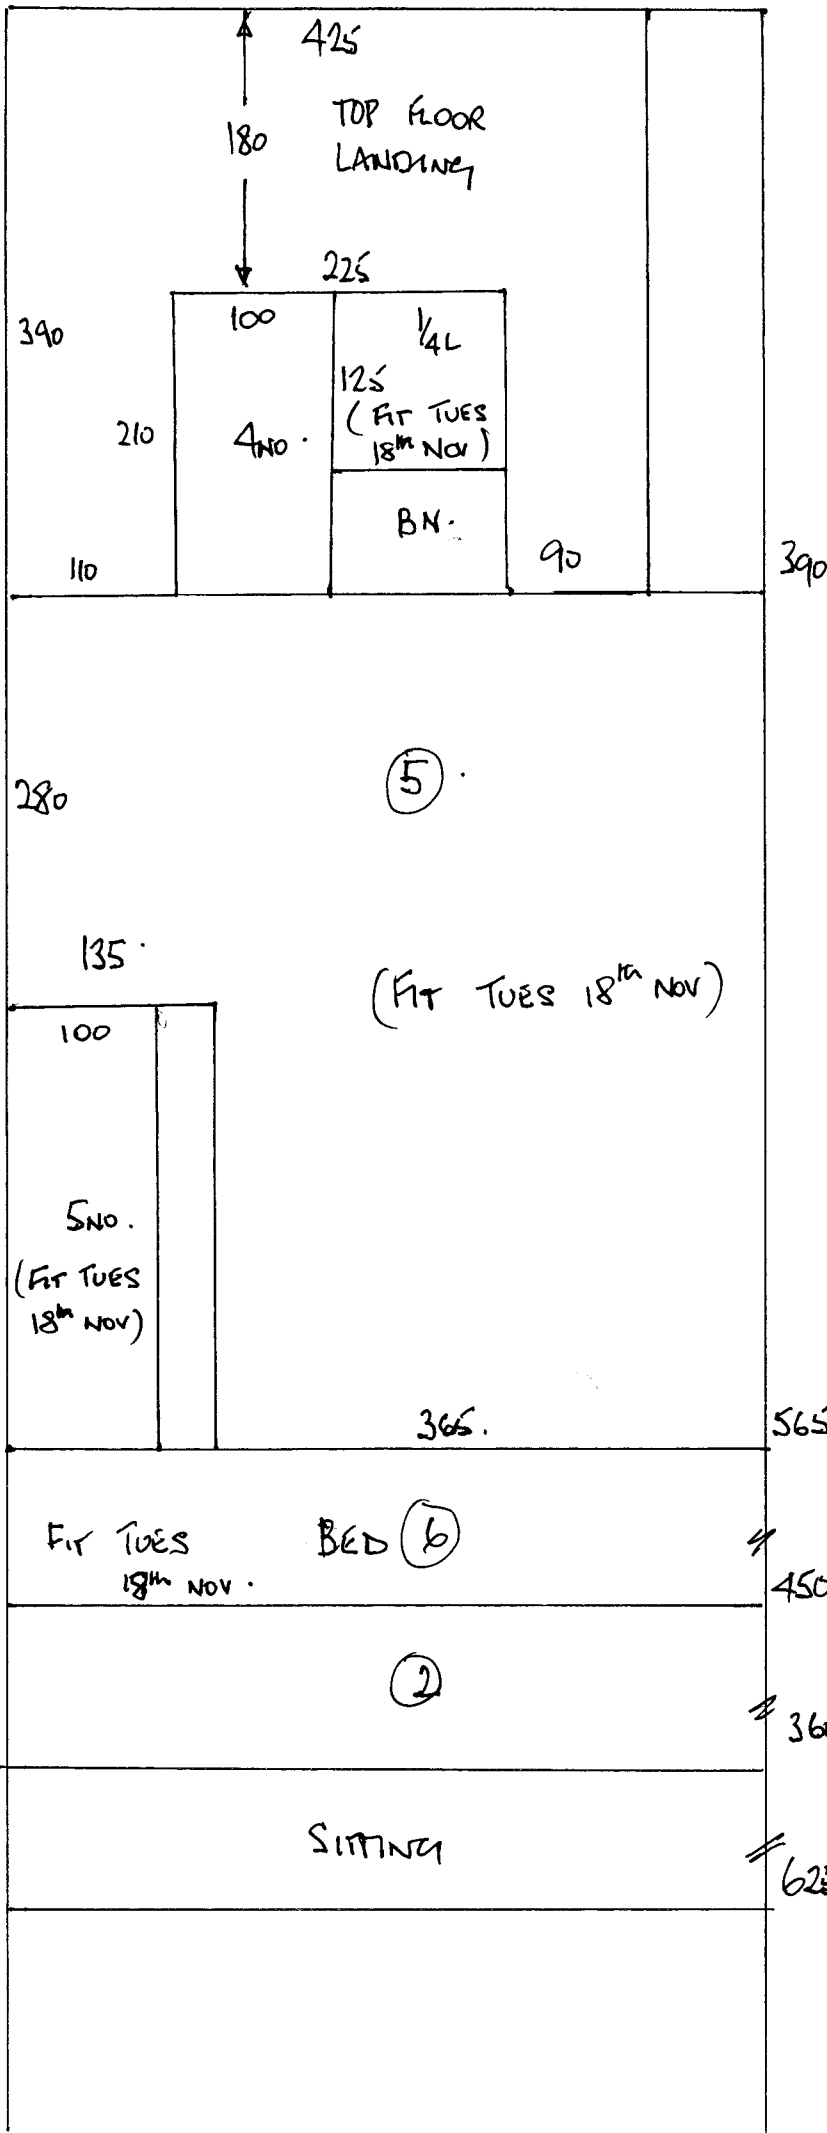

RIS477
 BENNET
 9 BEVEDERE DR.
 SWIG.

2 3

STAGE 1.

TUES. 18th NOV.

FIT - TOP FLOOR LANDING
 STAIRS DOWN x 5, 1/4 L ONLY
 (NOT REMAINING STAIRS).
 BEDS 5 & 6.

WED 19th NOV.

FIT - BED 1 SUITE.

FIRST FLOOR LANDING
& BNS x 2nd .

R15477
BENNETT
9 BELVEDERE DR
SWIG .

3 3 .

X
BED 1 PASSAGE 110
(FIT WED 19th
X NOV) 350

400 .

BED 1 .
(FIT WED 19th NOV)

825

555

X

PASSAGE .

110 X

FIRST
LANDING
SECTION .

395

100

125

1/4 L .

950