

Job No: S26595


Name: DINWIDDIE

Address:

Tel: 1 of 1

Sheet: of:

UNITS TO
BE INSTALLED
BEFORE FLOORING

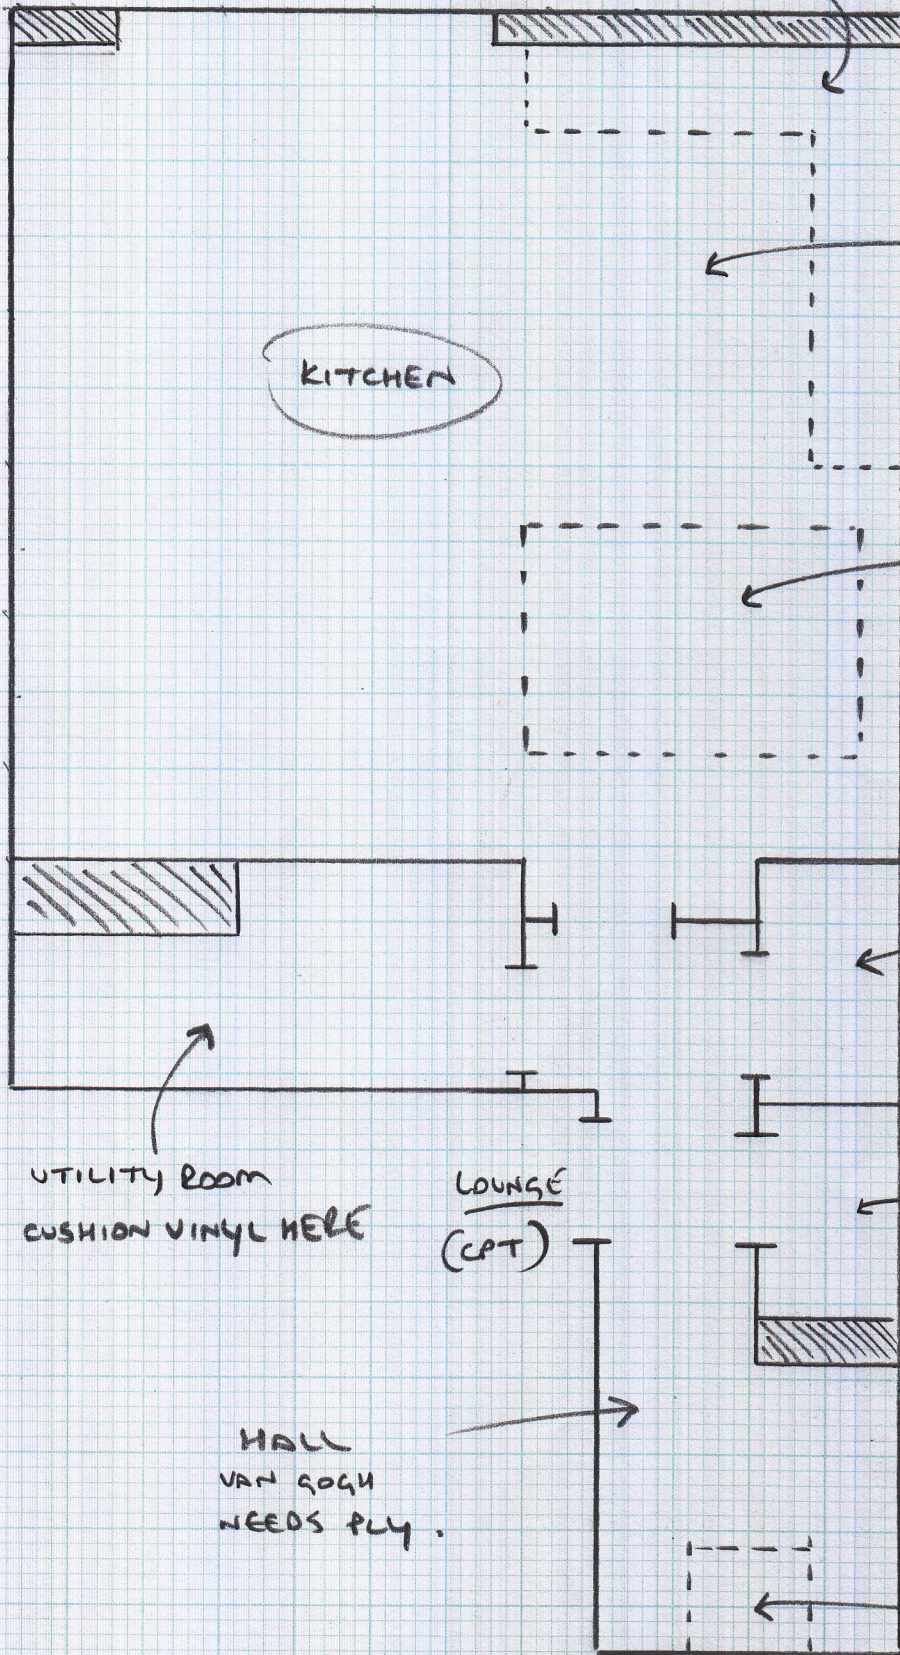

WOOD FLOOR
NEEDS PLY.

SOLID QUALITY
TILES.
USE F76 BEFORE
SCREEDINGS.

W/C
VAN GOGH
NEEDS PLY

UNDER STAIR CUB.
TAKE OUT ACCESS
PANEL FOR STOP
COCK + FIT VAN
GOGH ONTO
NEEDS PLY

HALL
VAN GOGH
NEEDS PLY.

COIR.
DO NOT FIT PLY
TO WELL.
CONFIRM SIZE
WITH CUSTOMER.

FRONT
DOOR.

UTILITY ROOM
CUSHION VINYL HERE

LOUNGE
(CPT)