


STEP BY STEP FITTING INSTRUCTIONS

1. Determine the installation direction of the Moduleo® floor. Calculate how the partition of plank or tiles will be across the width of the room/area and mark a 100% straight line on the floor.
2. Highlight the second line so create the section (for example, 5 rows wide) to be glued with the correct type of adhesive. Prior to using the adhesive read the supplier's instructions.
3. Spread the right amount of adhesive equally over the subfloor and let it dry (open time) until it reaches its initial bonding strength. For more information consult the specifications of the adhesive used and the Moduleo® bonding PVC floor instructions.
4. Lay the planks or tiles, respecting the direction of the arrows of the backing, into the sticky adhesive in order to transfer the adhesive fully onto the backing (working time).
5. Cut the planks or tiles free of tension against the wall or skirting.
6. Don't spread adhesive on a section greater than can be processed within the working time.
7. To ensure full contact with adhesive, immediately press every plank or tile with a trowel or hand roller.
8. Wipe excess adhesive with a damp cloth.
9. Roll each section with a roller of minimum 50kg immediately after installation and several times in different directions during the working time.
10. Repeat steps 3 to 9 until the entire installation is completed.

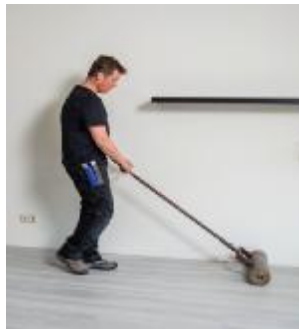

PROTECTION

Moduleo® should be protected from heavy traffic for 72 hours after installation so that the tiles and adhesive can stabilise at constant temperature between 18-27° C.

FIRST CONTACT WITH WATER

Prevent the floor from coming into contact with water for the first 72 hours after installation. Hereafter the adhesive is sufficiently resistant to water so that the bonding strength will not be affected.

Maintenance

CLEANING AND MAINTENANCE

Appropriate maintenance procedures will help to preserve the appearance and will extend the life of a Moduleo® Dryback. The frequency of maintenance will depend on the amount and type of traffic, degree of soiling and the floor colour & type.

Moduleo® Dryback has a Protectonite-PU lacquer on top of the resistant wear layer. This lacquer protects against soiling and makes the overall maintenance easier. Protectonite also makes a prior treatment with protection polish unnecessary.

EXTERNAL CONDITIONS

The appropriate management of external conditions can help to protect the flooring, which saves time and expense on cleaning and maintenance, and also extends the life span of the flooring. Most soiling comes from an external source and is transported indoors by foot and rolling traffic. If dirt lodges under sliding furniture, the flooring will not only be soiled but will also suffer (light) damage in the form of scratches.





Important:

- Take care to immediately wipe up any spillages on the vinyl flooring to minimise the risk of permanent staining occurring.
- Moduleo® flooring can be slippery when wet.
- If the use of a neutral detergent is necessary then follow the rules and mixing proportions quantity of the manufacturer.
- After cleaning, the floor should be dry within 1 or 2 minutes so there is no residual water with cleaning detergent and dirt remains on the floor.

ENTRANCE MATS

A proper clean-off zone is strongly recommended. It will reduce the soiling of the flooring by as much as 70%. Entrance mats, when properly serviced, can effectively remove any abrasive and foreign materials from foot traffic and reduce the amount of absorbed water. Moduleo® recommends a minimum of two full strides of entrance matting. Where possible, prevent dirt from reaching the floor. A suitable barrier matting system will help prevent soiling and abrasive material from entering a building and make maintenance easier.

Regularly clean the clean-off zone so that it functions optimally. Prevent fibres from the clean-off mat from running or adhering together with dirt. As far as possible, remove sand and adherent dirt such as chewing gum using a spray or gum remover. Replace the clean-off mat in time to ensure an optimal functioning dirt entrapment zone.

Avoid rubber or latex backed mats as these may leave stains.



PROTECTION OF SLIDING FURNITURE

Good protective caps have a sufficiently large support surface, possibly a hinge to ensure a straight contact between the furniture and the flooring, and are made of a non-absorbent material to prevent the ingress of moisture and dirt.



XTRAFLOOR CLEANER MAINTAINER:

Our range of cleaning products has been specially formulated for use with Moduleo® products. Our concentrated cleaner is suitable for daily and weekly cleaning and can be used with all cleaning methods, such as damp or wet mopping, combine machine, spray cleaning and scrubbing.



XTRAFLOOR SPOT REMOVER

A ready to use cleaner formulated for removal of spills and other deposits. Xtrafloor supplies a range of maintenance products which are recommended for cleaning Moduleo® products. Products containing soap or unsuitable detergents such as washing up liquid may leave

REGULAR CLEANING

Remove daily dirt

- Sweeping
- Dry mopping
- Vacuum cleaning

Spot and stain removal

- Damp cloth
- Handpad

Damp mopping

- Microfibre damp mop
- Traditional mop (as dry as possible)

OCCASIONAL CLEANING

Mopping

- Damp mopping
- Traditional mopping (as dry as possible)

Combine machine

- Red scrub pad
- Neutral detergent
- Low amount of water!

a hard to remove film or residue on the surface. These can detract from the floor's appearance and may be slippery. Xtrafloor maintenance products are carefully manufactured to produce the highest performance when used in accordance with the instructions on the box.

Note:

Contact your Moduleo® Dryback representative / retailer if you are unsure about any part of the installation & maintenance instructions.

MAINTENANCE:

Spray cleaning

- High-speed (450 rpm)
- Red dry buff pad
- Spray bottle with neutral detergent

Scrub and wet vacuum

- Low speed (180 rpm)
- Red scrub pad
- Neutral detergent
- Wet vacuum
- Rinse by damp mopping with clean water without detergent

Recover gloss different

- High-speed (450 rpm)
- Red and with dry buff pad

Camouflage minor scratches

- High-speed (450 rpm)
- PU refresher
- Red dry buff pad
- Cotton cloths



Important part from the warranty:

- Almost all flooring will vary in colour over time when exposed to UV light. Avoid this by using curtains or sunscreens when the sun is very bright.
- Avoid rubber or latex backed mats as they may leave stains. Also rubber and latex castors (we advice castors type 'W' in accordance with EN 12529) or protection caps under furniture cannot be used.
- Protect against scratching from furniture feet by using wide free-moving castors, glides, rollers or felt pads. Use furniture caps under heavy items or appliances to prevent indentation.
- Do not allow cigarettes, matches and other very hot items to contact the floor as this causes permanent damage.

Contact your Moduleo® floor representative / retailer for complete warranty conditions.