

Phase 1 - 2 of 5

P26389
Betts

1 of 2

Finework

Col: Fin 116

Cut Plan ① 675x500


Cut Plan ② 420x500

* MARK UP & STORE w/ W/H UNTIL PHASE 2


Phase 1 - 2015

P26389
Betts

2 of 2

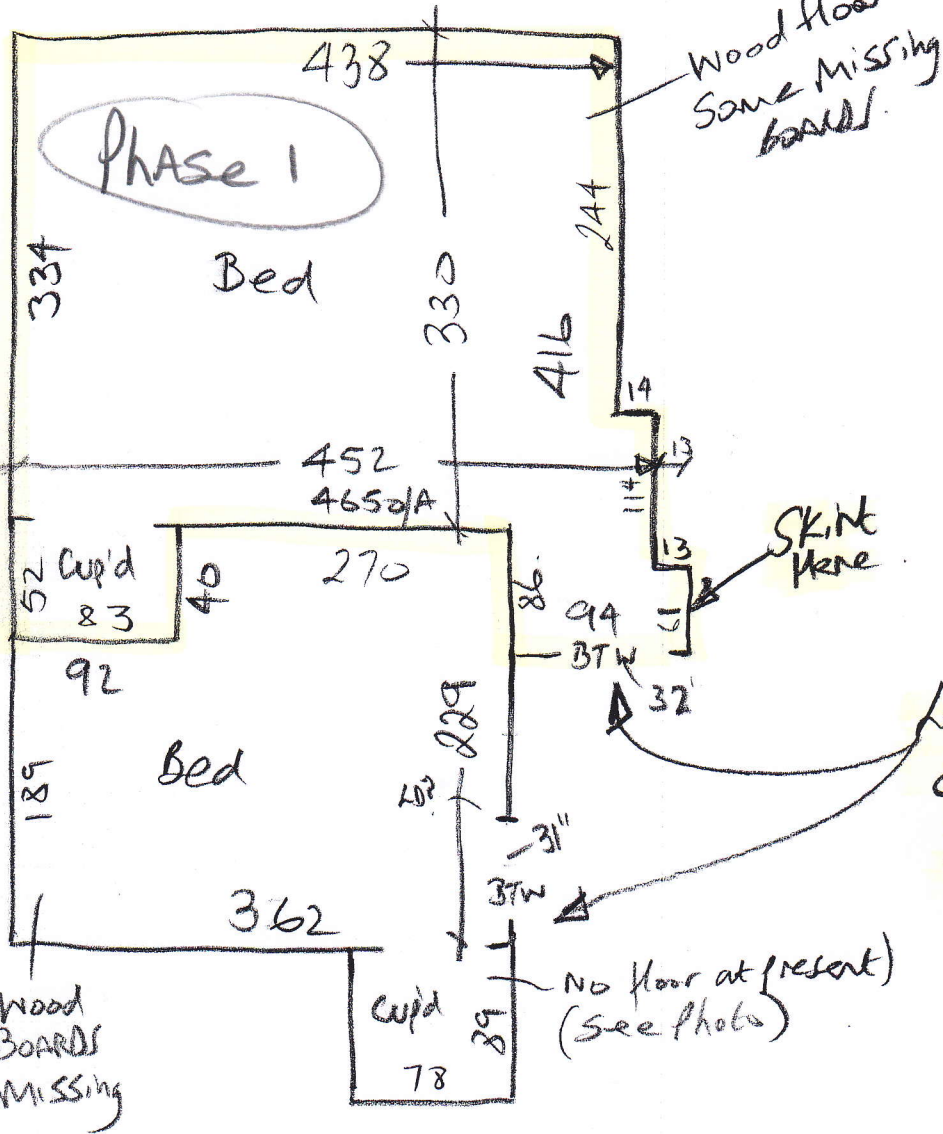

Leave long at
door until wood
floor is fitted in
Hall way

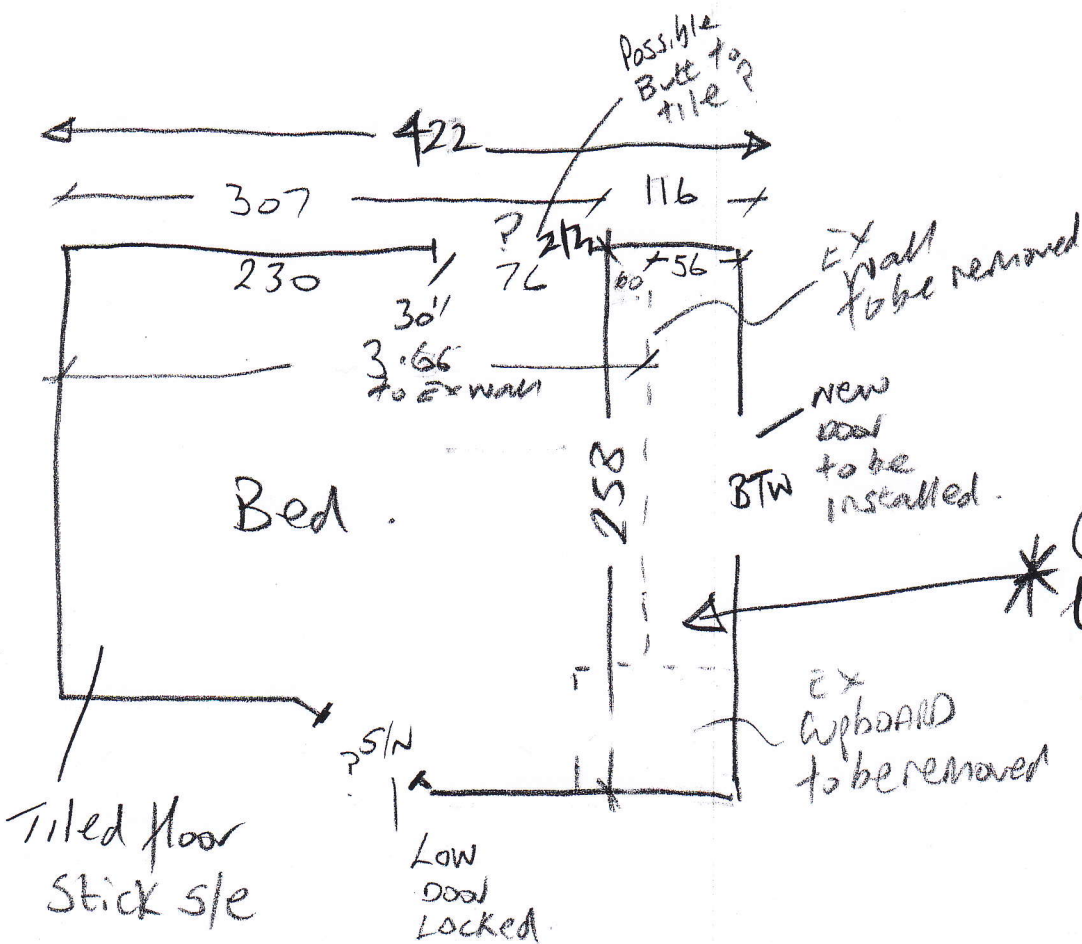

* Check Measure
this room After
Building work.