


Tiverton - TIV-908

mrcarpet  
Job No: P26451  
Name: Mac Coll  
Address:  
Tel:  
Sheet: 1 of 1

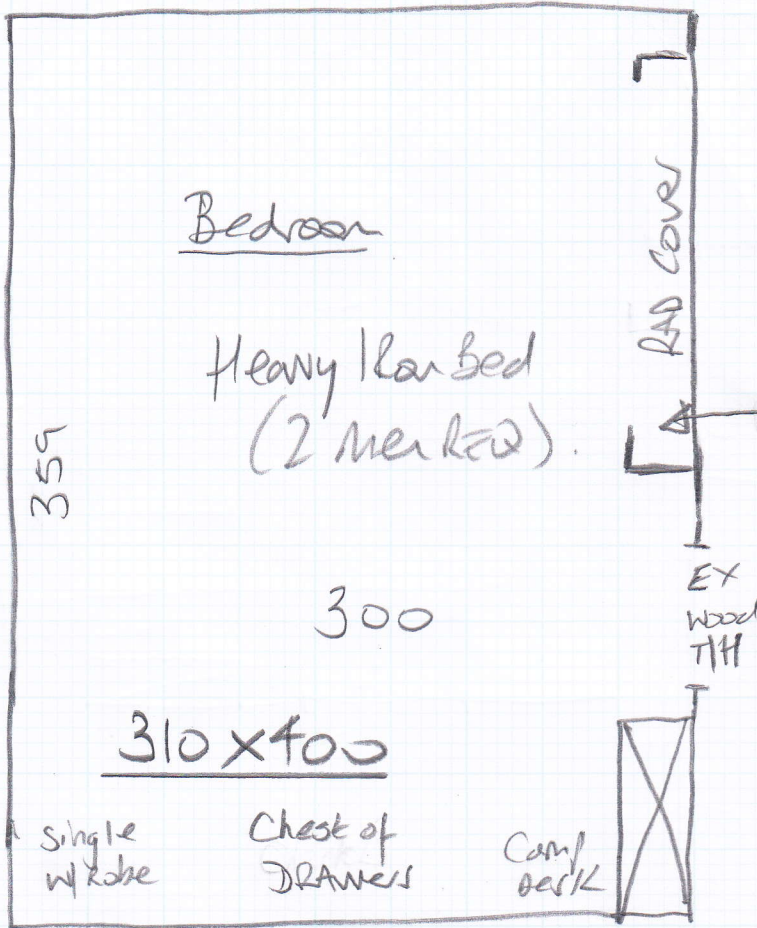

\* Remove Radiator Cover before putting Carpet.

uplift ex loop berber or felt  
Re-use ex s/jc Nailed into Vinyl over concrete

\* Heavy furniture

\* Customer will provide a parking permit  
So you can PARK on site