
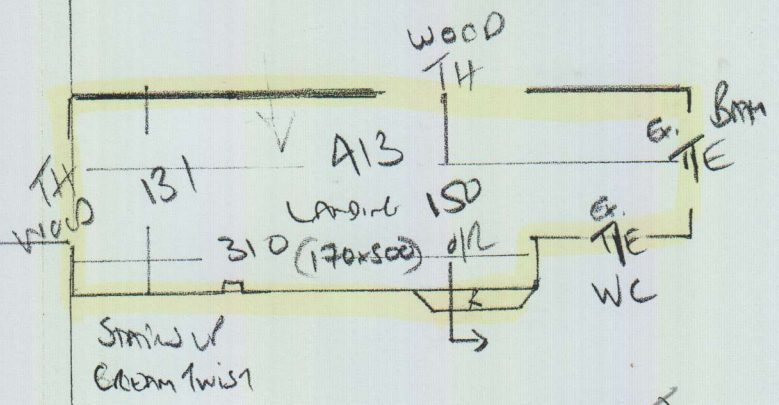



P27229  
 MORGAN  
 S3 ENGINER/CP  
 SWIS IBA

10F1

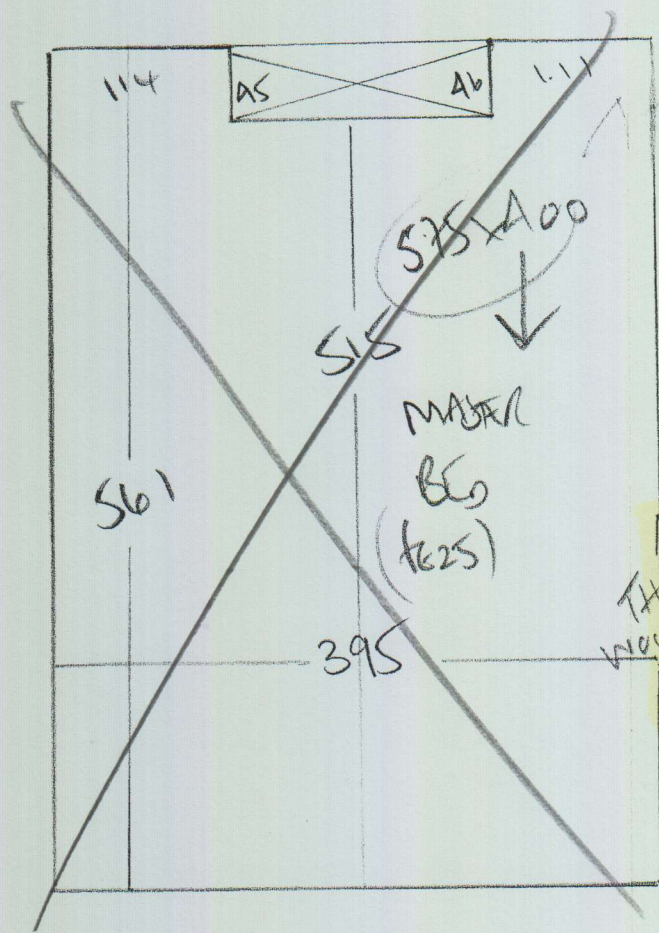

~~2T (CLOSE COVER)  
 AS x 82 (COVER)~~

~~To 11W 12T  
 HALL AS x 95 AS x 83  
 \* For AS 63cm RUNNER  
 (10cm GAP on BOTH SIDES)~~

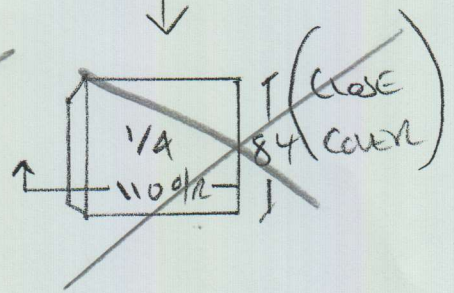

= THESE AREAS ONLY.