

* CUSTOMER TO LEAVE PARKING PERMIT FOR YOU AT THE PROPERTY


P.J. * FIT CUST'S OWN CARPET (ON SITE) TO B/N + IT ON 1ST FLIGHT OF STAIRS.

* ON ARRIVAL PLEASE DISCUSS WITH BUILDER (BOBBY - 07905-324013) HOW THE STEPS SHOULD BE BUILT FOR THE CARPET TO FIT (ON TREADS, PINNED UNDER NOSES + TO SIDE OF STEPS).

* TAKE CASH ON SITE IF YOU GET TO FIT THIS.

P27621
 MCKELMAN
 21 MEADOW LANE
 SW19 2ND

2 of 2

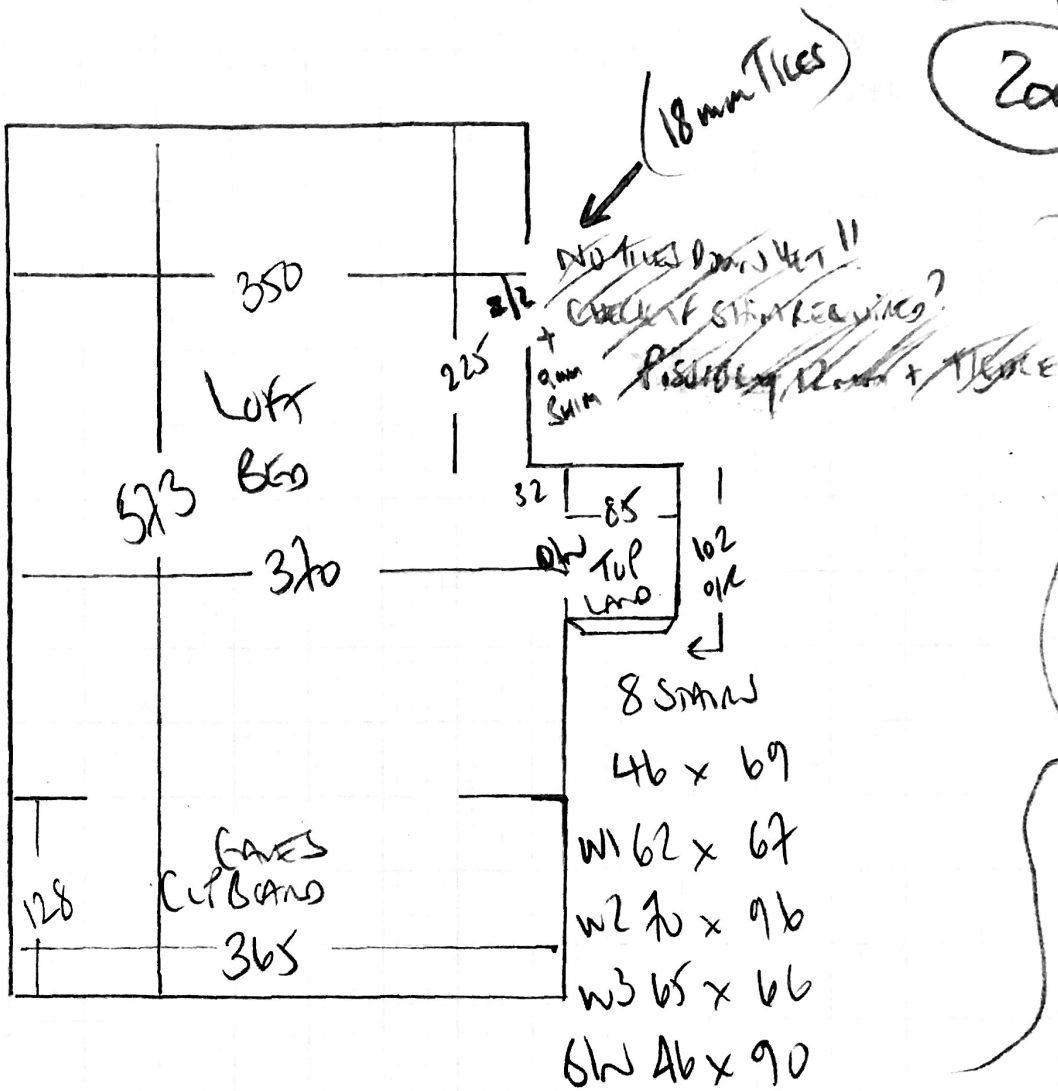

All for
 New
 CARPET

Bottom flight Stairs (2 STRIPS ONLY)
 FIT CUSTOMERS OWN CARPET: W1 & BULLWASE
 (WASTE FROM PREVIOUS ORDER)

BULLWASE BROKEN - NO LIP TO FIT UNDER!!

SEE PHOTO GRANTS - BUILDER WILL NEED TO RETAIN BULLWASE

BEFORE IT CAN BE FITTED WITH NEW CARPET

SEE PLAN 1 of 2
 DISCUSS ON
 SITE