

PHASE 2 - 30/4 + 1/5

P28199
FRASER

LOF6

SLOANE TWIST SUPRA 50

- SLO-5037

Cut Plan 1 = 535×500 (A)

" 2 = 350×500 (A)

" 3 = 770×500 (A)

" 4 = 345×500 (B)

" 5 = 775×500 (A)

2775×500


~~$= 138.75 \text{m}^2$~~

25m Roll (A)

+

3.45m Cut (B)

$= 142.25 \text{m}^2$

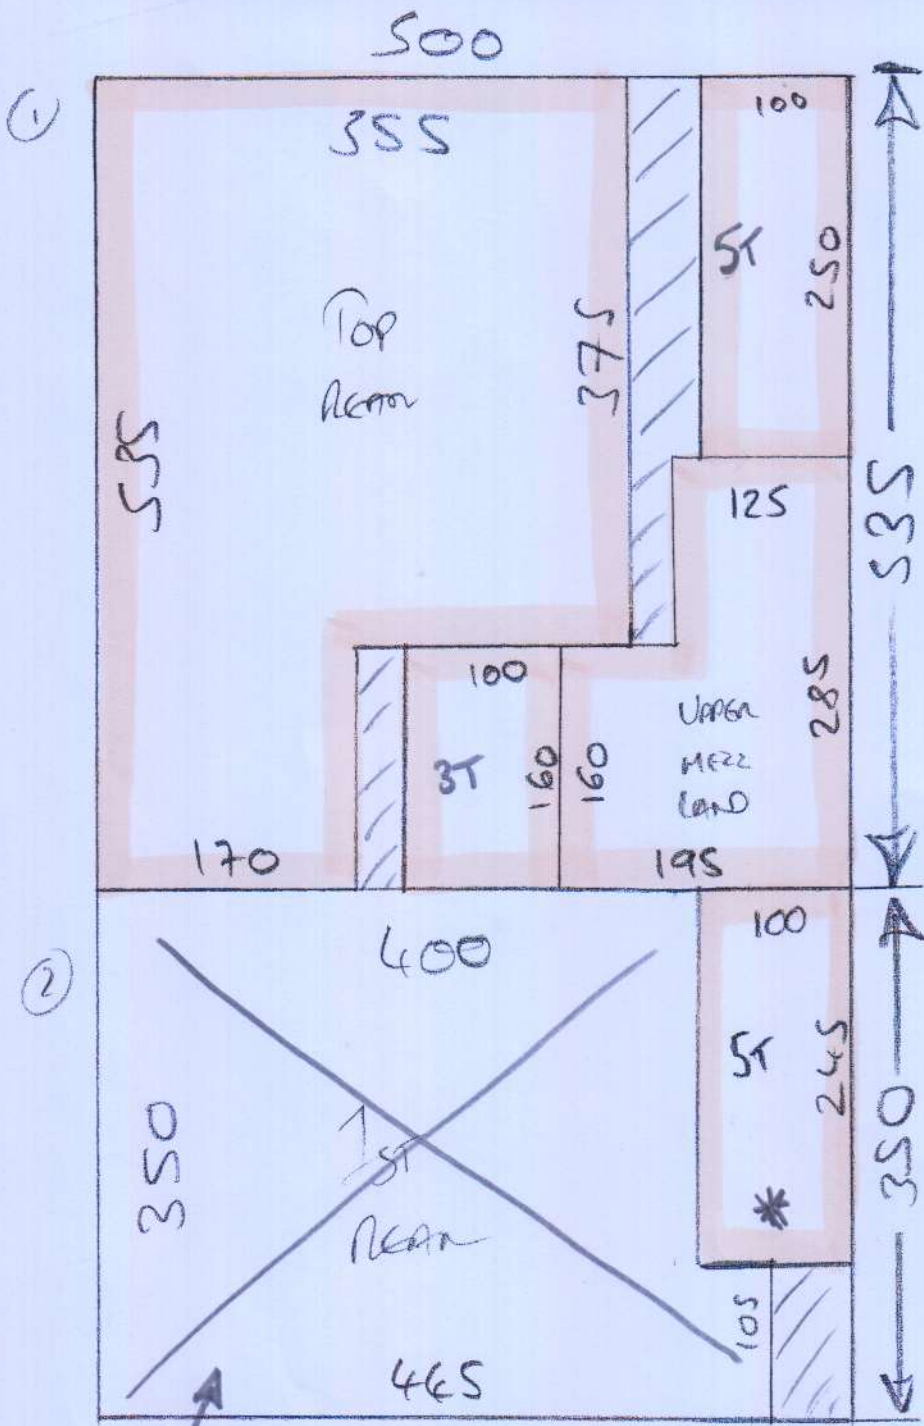


FITTED 25/4


* = CUT DOWN ON PHASE 1 & STORED AT WAREHOUSE

UNDERLAYS

H/M LUXURY PU FOAM TO ALL ROOMS + LANDINGS
HEAVY DUTY RUBBER TO STAIRS ONLY
DURAFIT FOR 5 WRAP AROUND STAIRS

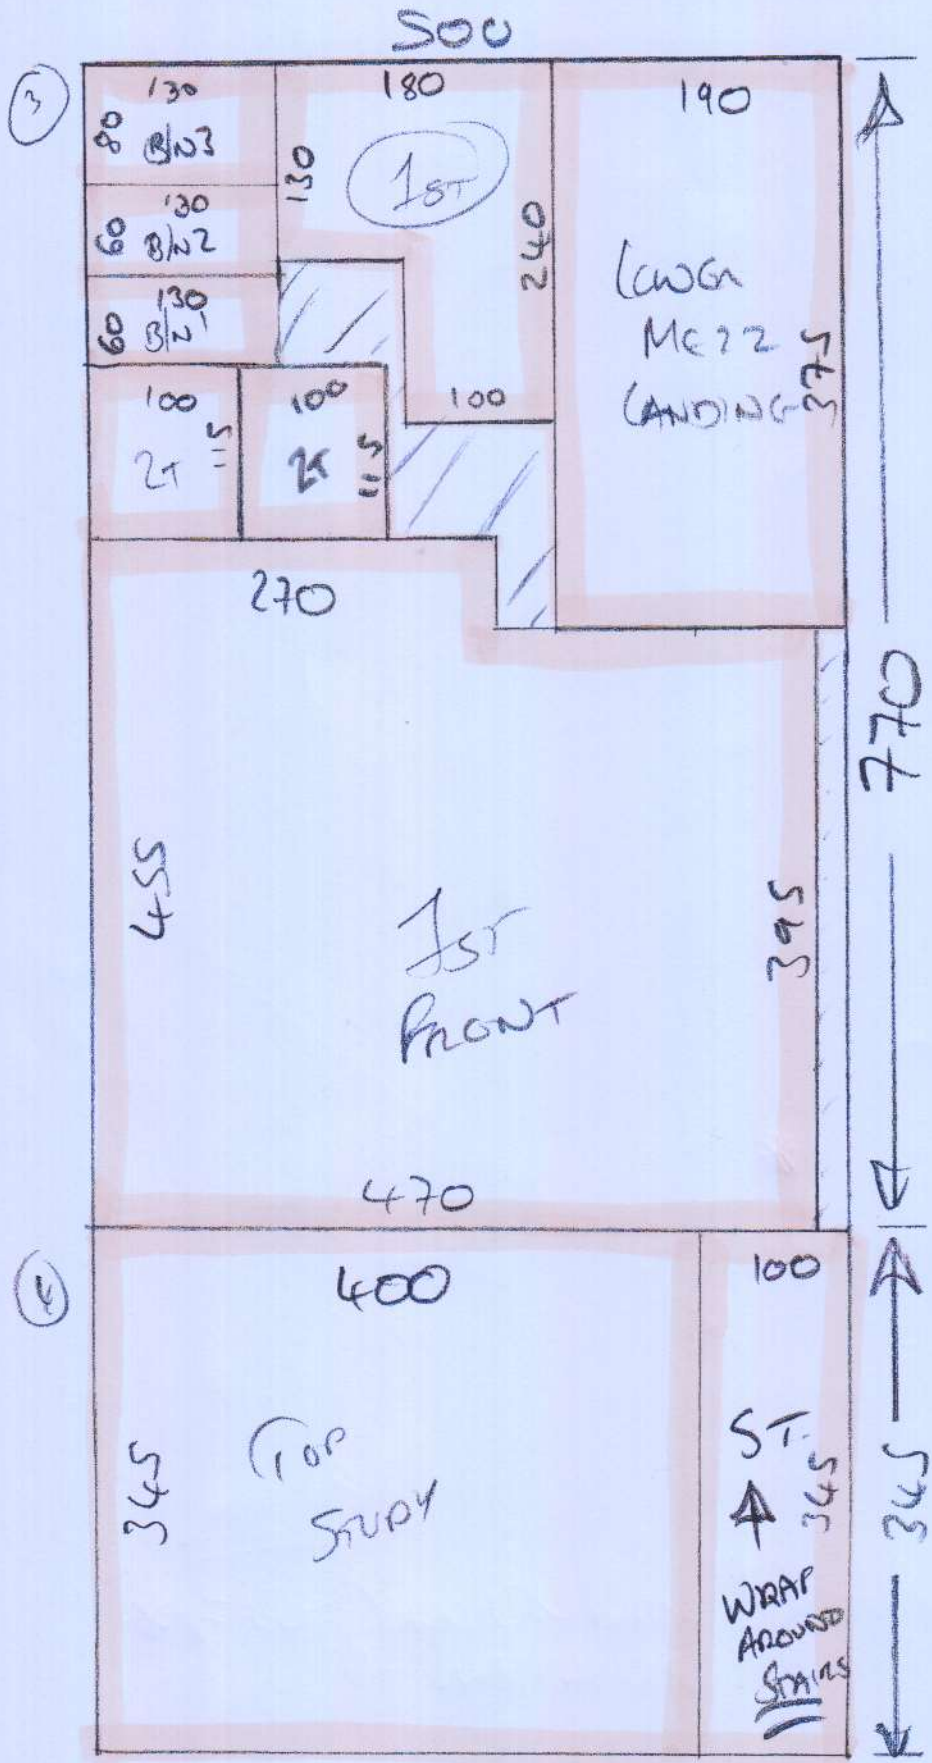


P28199
FRASEN
Lorb

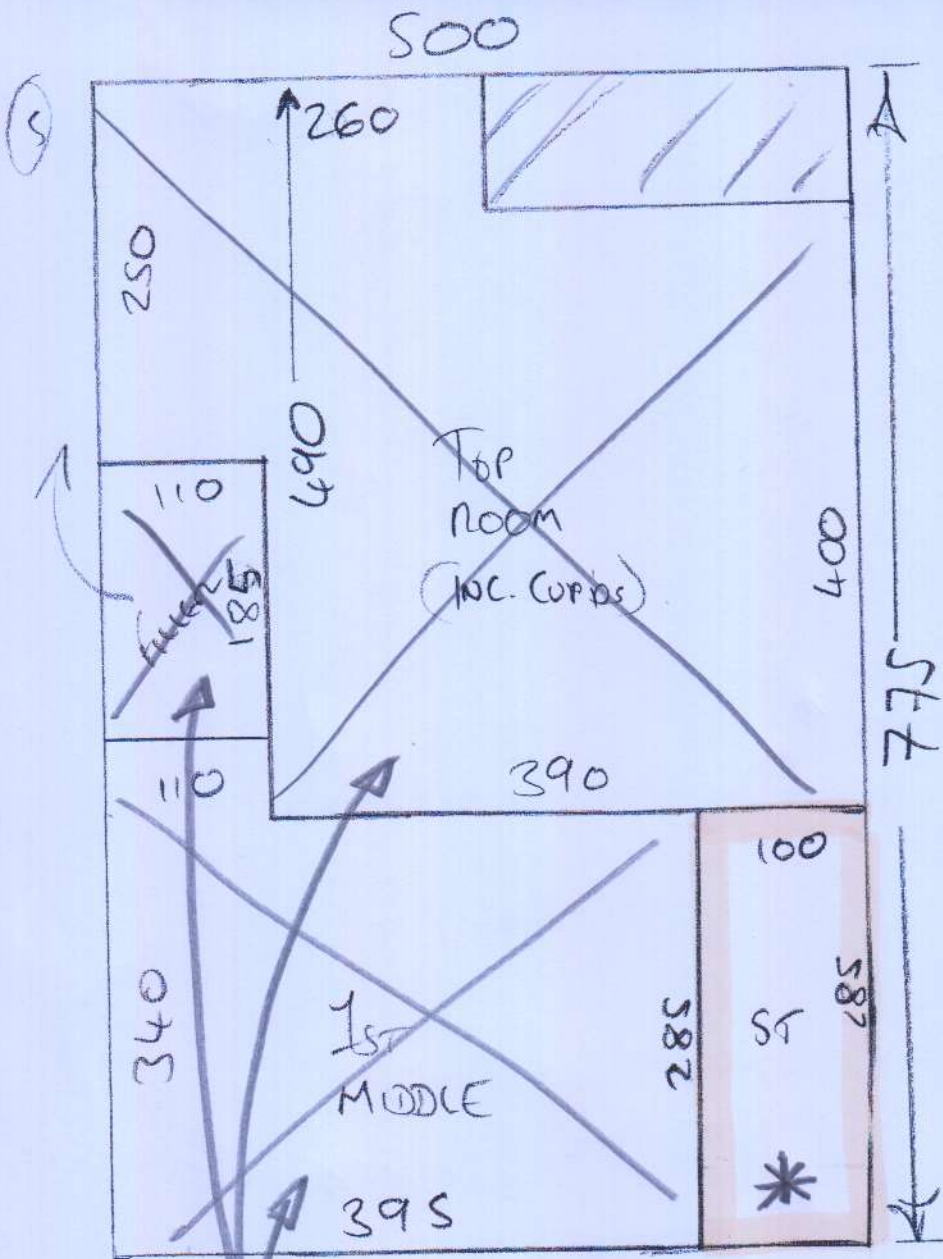

Fitted 25/4

P281a9
 mason
 30r6

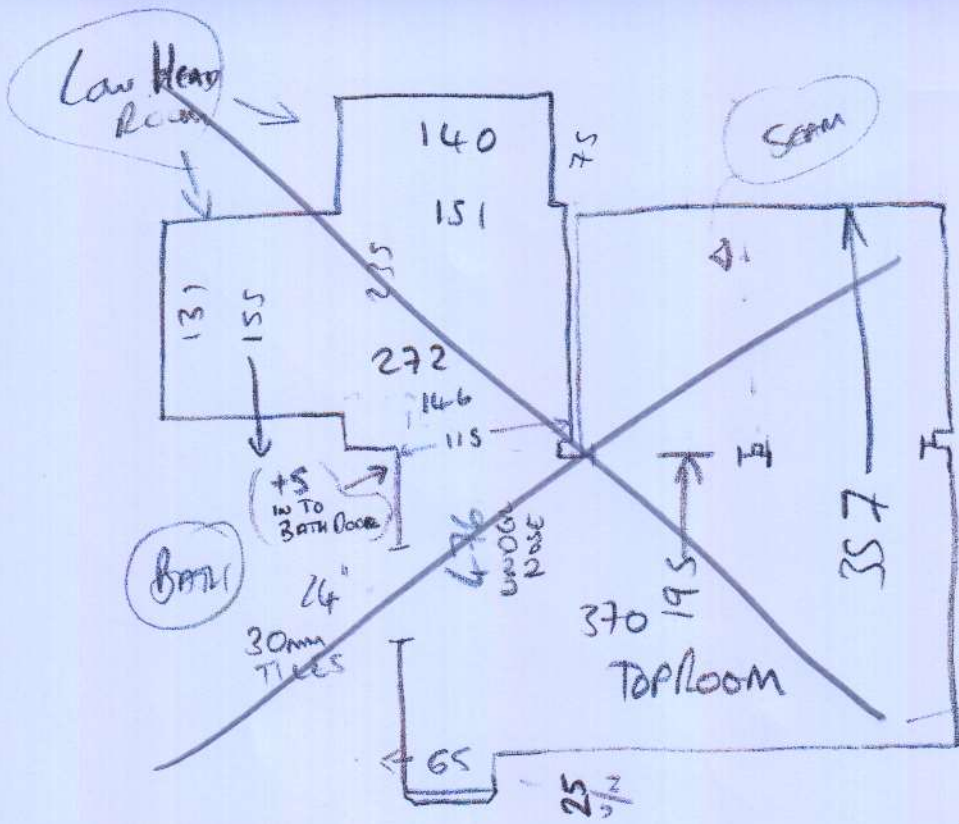



P28199
FRASER
4096

LOTS OF BOXES
ETC - MUST TO MOVE

IKEA UNIT MUST
BE REMOVED

FIXED SUPPORTS
FROM FLOOR TO
CEILING!

WRAP AROUND
STEPS

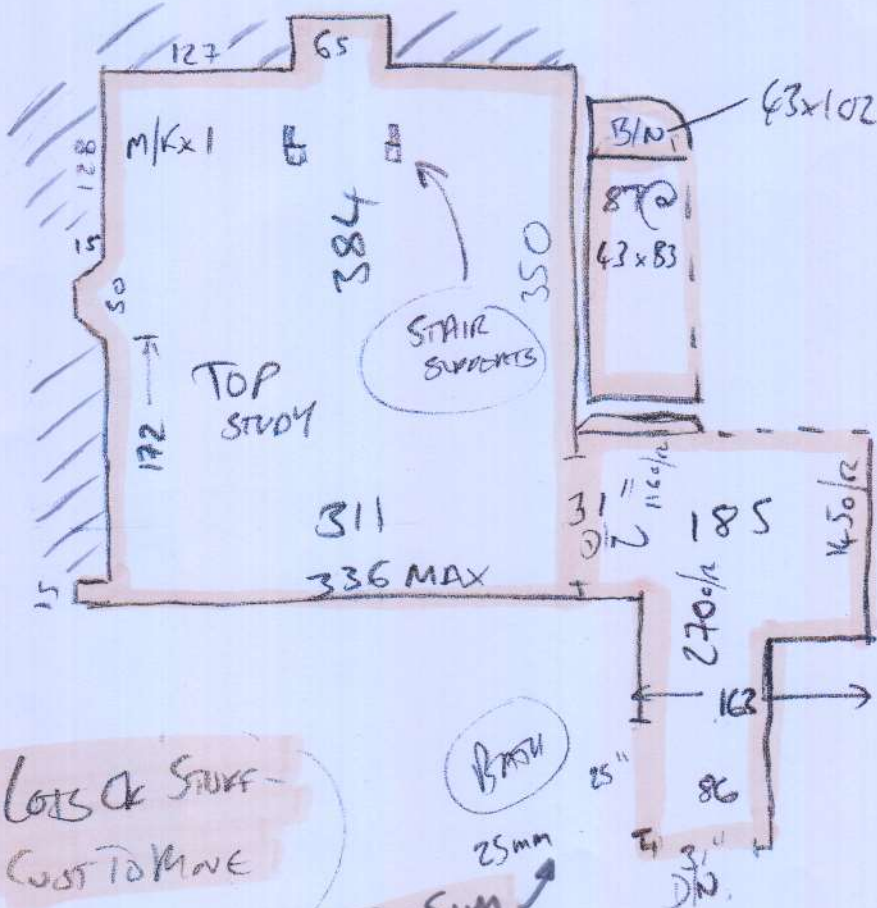

LOTS OF STUFF -
MUST TO MOVE


FIT SIM
& BUTT UP

TO TOP ROOM

To Lower Mezz (AND)


P18199
FRASER


50x6

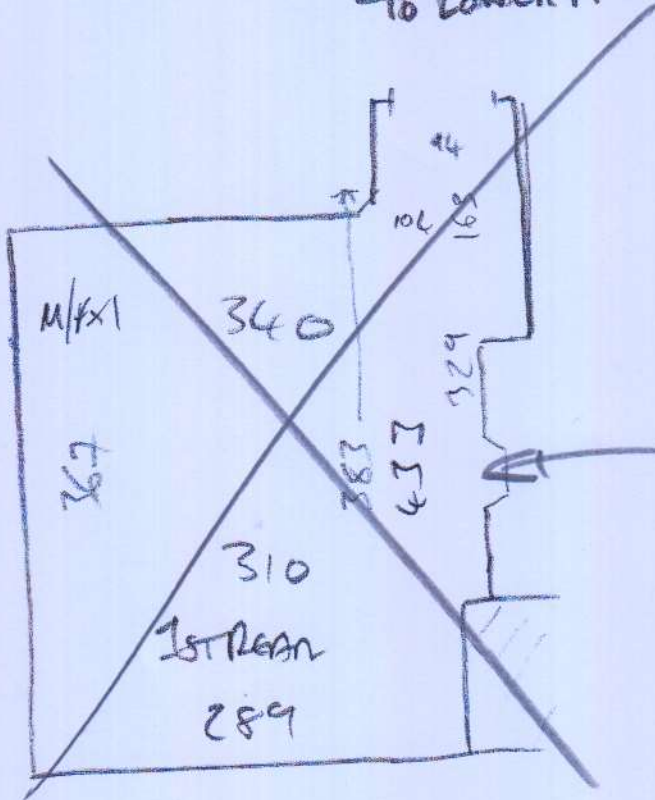

FITTERS 2 1/4



TO T/C

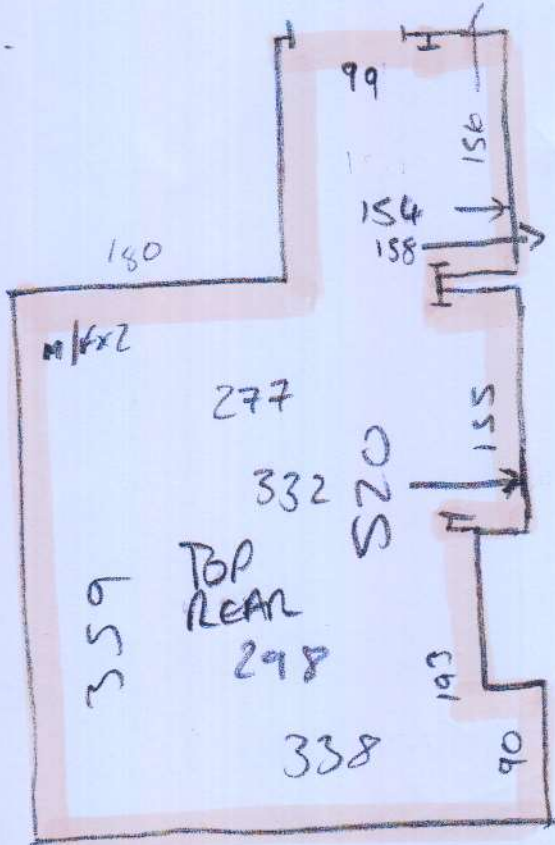

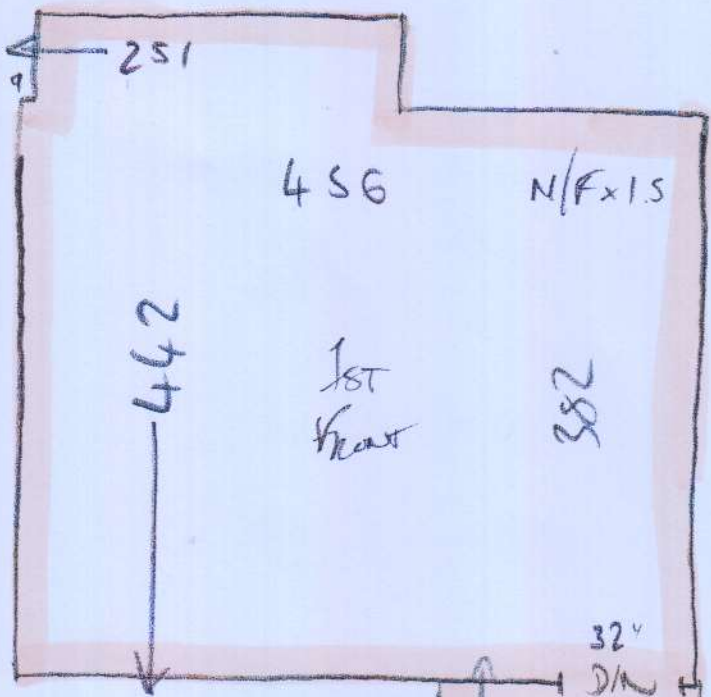

A18199
FRASER

6066

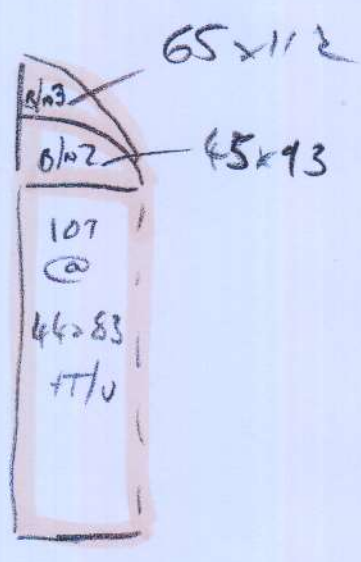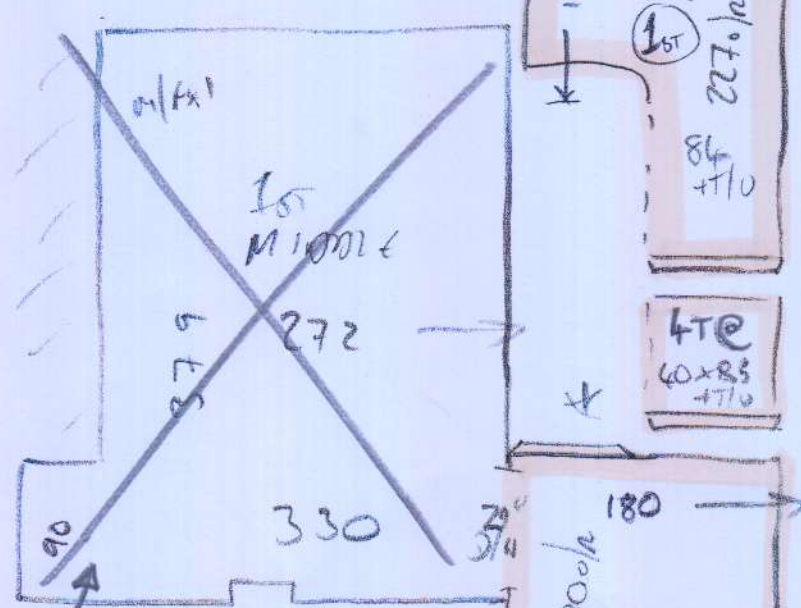

FITTED 25/4

NATURAL
COIL @
27 x 125

~~SHOW
OPTIONS FOR
COILS~~

DATA

29"
30-35mm
TILES
w/THIN

FIT SUM
& BOT UP

(TO 1ST REAR)