

10MM P.V. FOAM ↑

P30100
Dod

1 OF 2
TRALLE
~~TRALLE~~ TWICE
Col. ~~TRALLE~~ TRA-5088

Lower Back Bed 3.55×400
Cut Plan 555×400

 910×400


 $= \underline{\underline{36.40m^2}}$

v/Lay = $30m^2$

Front EAVES (NO CARPET)
EX S/N

P30100
Dad
2 OF 2

Move this
Free standing
W/kabe fixed
to wall by 2
* Screws

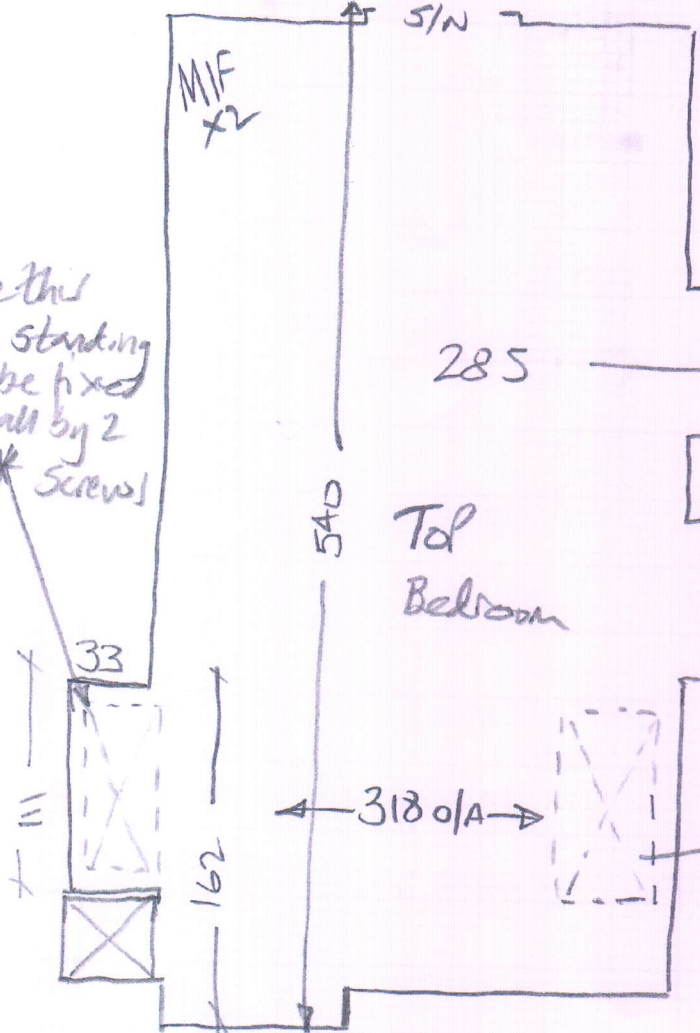

BATH
(Tiled)

10MM PU
FOAM TO THIS
Bedroom


Move this
Free standing W/kabe
Fixed to wall
With 2 Screws

FELT.

Wood floor
Re-use ex s/e
+ D/BALS

Uplift Ex Moth
Infested CARPETS
& leave neatly
outside for
Collection/Disposal
by others.

5mm PU foam
TO THIS Bedroom

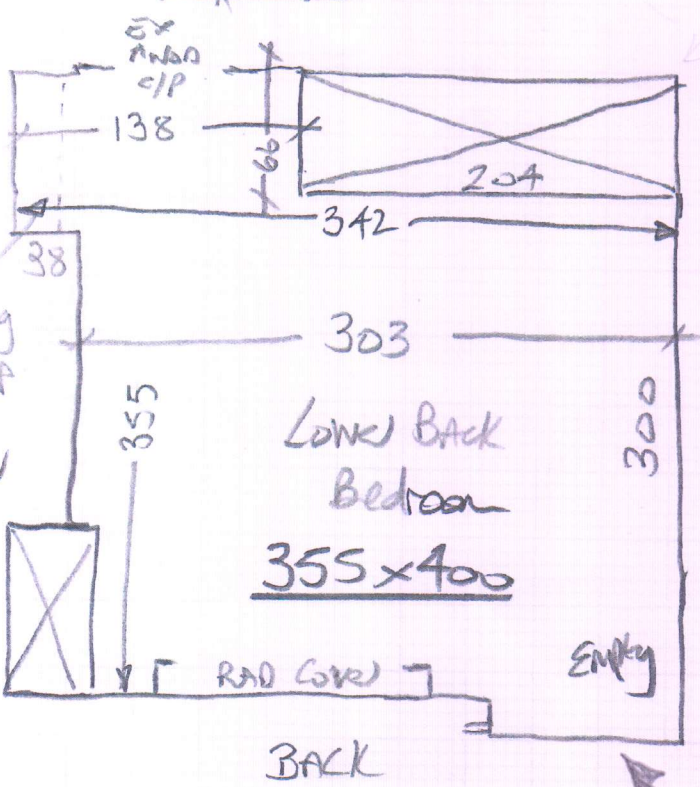

Shelving
over top
13cm
off floor