


Instructions for Mr West – R16912

Customer not on site.


1. Ring Rhian on 07949 009598 30 – 40 minutes before going to site for access.
2. Uplift gripper in bathroom and if necessary fill in holes.
3. Fill hole in hall with screed

Job No: R16912
 Name: WEST
 Address: 40 TAVERN Close
 SMS 1JE
 Tel:
 Sheet: 2 of 2

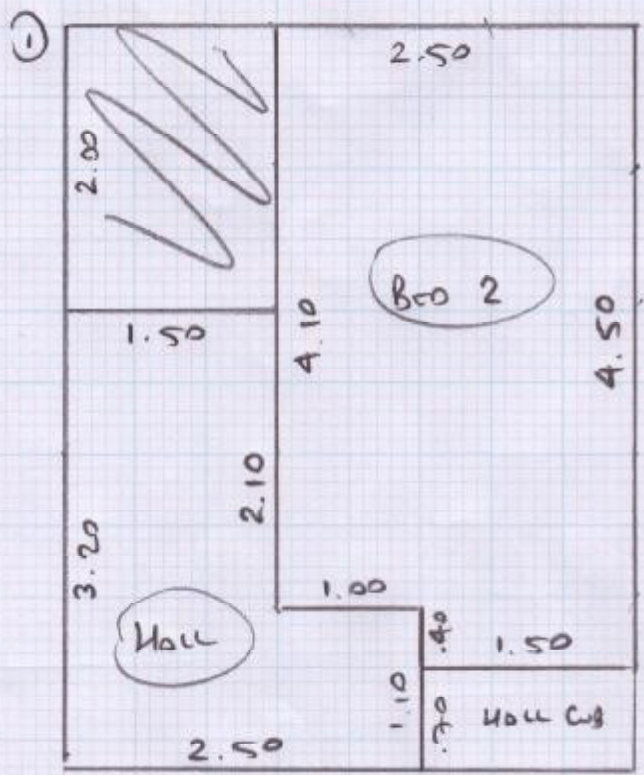


London Twist Avon.

- Bed ① 2.90 x 4m
- Plan ① 5.20 x 4m
- Plan ② 5.20 x 4m

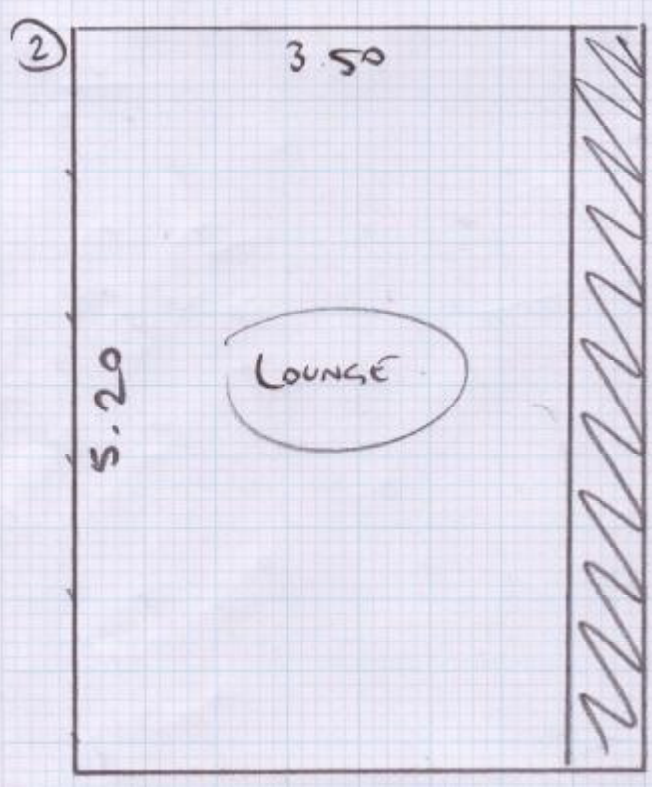

Mush Vinyl HF/16
 2.20 x 4m

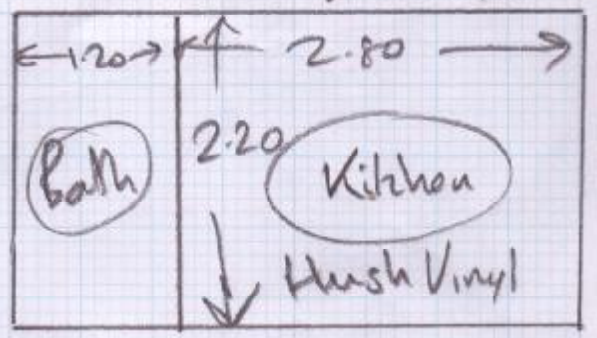

R16912

MR T WEST

Job No:

40 TAVERN CLOSE
SMS 1JE

Sheet:

1 of 2

Bed 1


- CONCRETE FLOOR
- VLA CPTS
- INT 2 UNITS
- EX S/E

Lounge

- CONCRETE FLOOR
- VLA CPTS
- INT 2 UNITS
- EX S/E

Bed 2

- CONCRETE FLOOR
- VLA CPTS
- INT 2 UNITS
- EX S/E

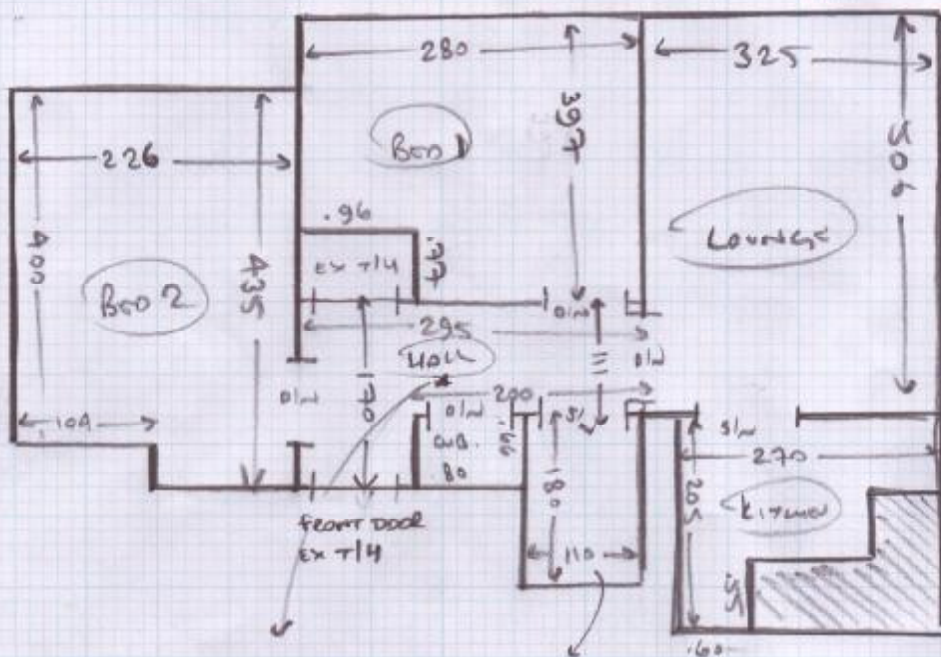

- KITCHEN
- CONCRETE FLOOR
 - NO PREP.
 - MOVE 2x APPLIANCES

Small channel
in floor will be
slightly lower
than rest
allow 1x bag
of fast track 30

between

- CONCRETE FLOOR
- VLA CPTS
- PREP? DISCUSS WITH CUSTOMER

NOTE! - flat is on 2nd floor
NO LIFT!!

THERE WILL BE NO
FURNITURE SO CAN FIT
ALL IN 1 DAY.