


503 OVER ALL
400

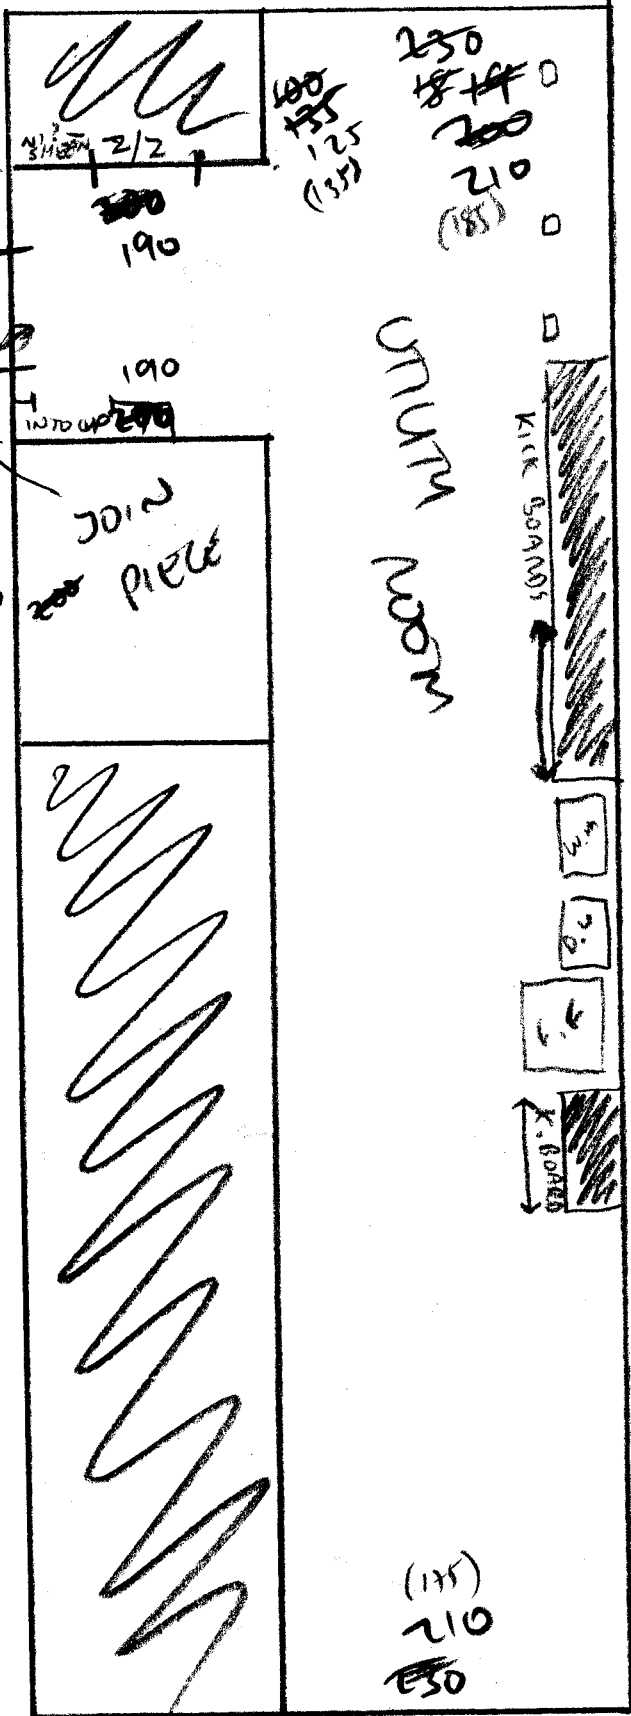

1130 x 4m

(1115)
1130

WOOD MINUS ROOM

JOIN PIECE

KICK BOARD

K. BOARD

(135)
210
230


VINYL DROP DOWN TO MEET WOOD FLOOR

- FIT TAGS AROUND
3 X MANHOLE COVERS
- FILL GAP AROUND MANHOLE COVER +
MAIN FLOOR WITH CLEAR SEALANT
SO THAT THEY CAN CUT THROUGH, STOPS
SCREED GOING DOWN GAP
- SCREED SUBFLOOR INC MANHOLE COVERS
TO GET SMOOTH LEVEL
- INSTALL VINYL TO FLOOR INC MAN
HOLE COVERS
- SEAM NEAR JUST OUTSIDE BATHROOM
POOL WAY
- GIVE DOWN NISHEEN 2L + SCREED
INTO IT + FIT VINYL AGAINST
BATHROOM SETTLERS.
- LET ME KNOW WHAT YOU RECOMMEND
@ WOOD FLOOR.

MANHOLE COVER

FLOOR

TAG THRESHOLD

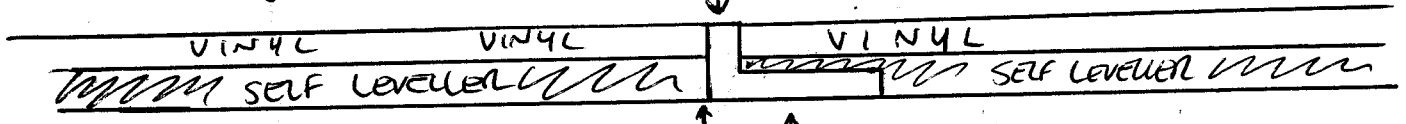

THRESHOLD

SILICONE SEAL SO THAT SELF LEVELER DOESNT GO DOWN GAP BETWEEN MANHOLE COVER + FLOOR