

Fitting Instructions S28769 Bowood Commercial

PLEASE READ BEFORE GOING TO SITE

When on site ring bell for Stubbs, Field or Crowther in that order for access.

Uplift separate visit – Instructions re uplift

First visit uplift carpet and underlay to ALL the areas listed below. Scrape underlay from landing where double stuck.

Front stairs 1st flight
Half landing
Front stairs 2nd flight
Main landing

Rear stairs 1st flight
¼ landing
Rear stairs 2nd flight
½ land

Remove ALL carpets from site on first visit as areas being sprayed on Tuesday.

Job No: S28769
 Name: Lawood Commercial
 Address: Common Gate,
 243A Wimbledon Road
 Tel: SW18 5RS.
 Sheet: 1 of 3


Macedonia 609/24
 23.90 x 4m
 2.90 x 4m
 26.80 x 4m
 Mainline Holland Park
 108 m².

Leare Carpet @
 Whouse or Mats


Car Block

1.30 x 2m rear
 1.70 x 2m front.

Smats = 20m Whipp

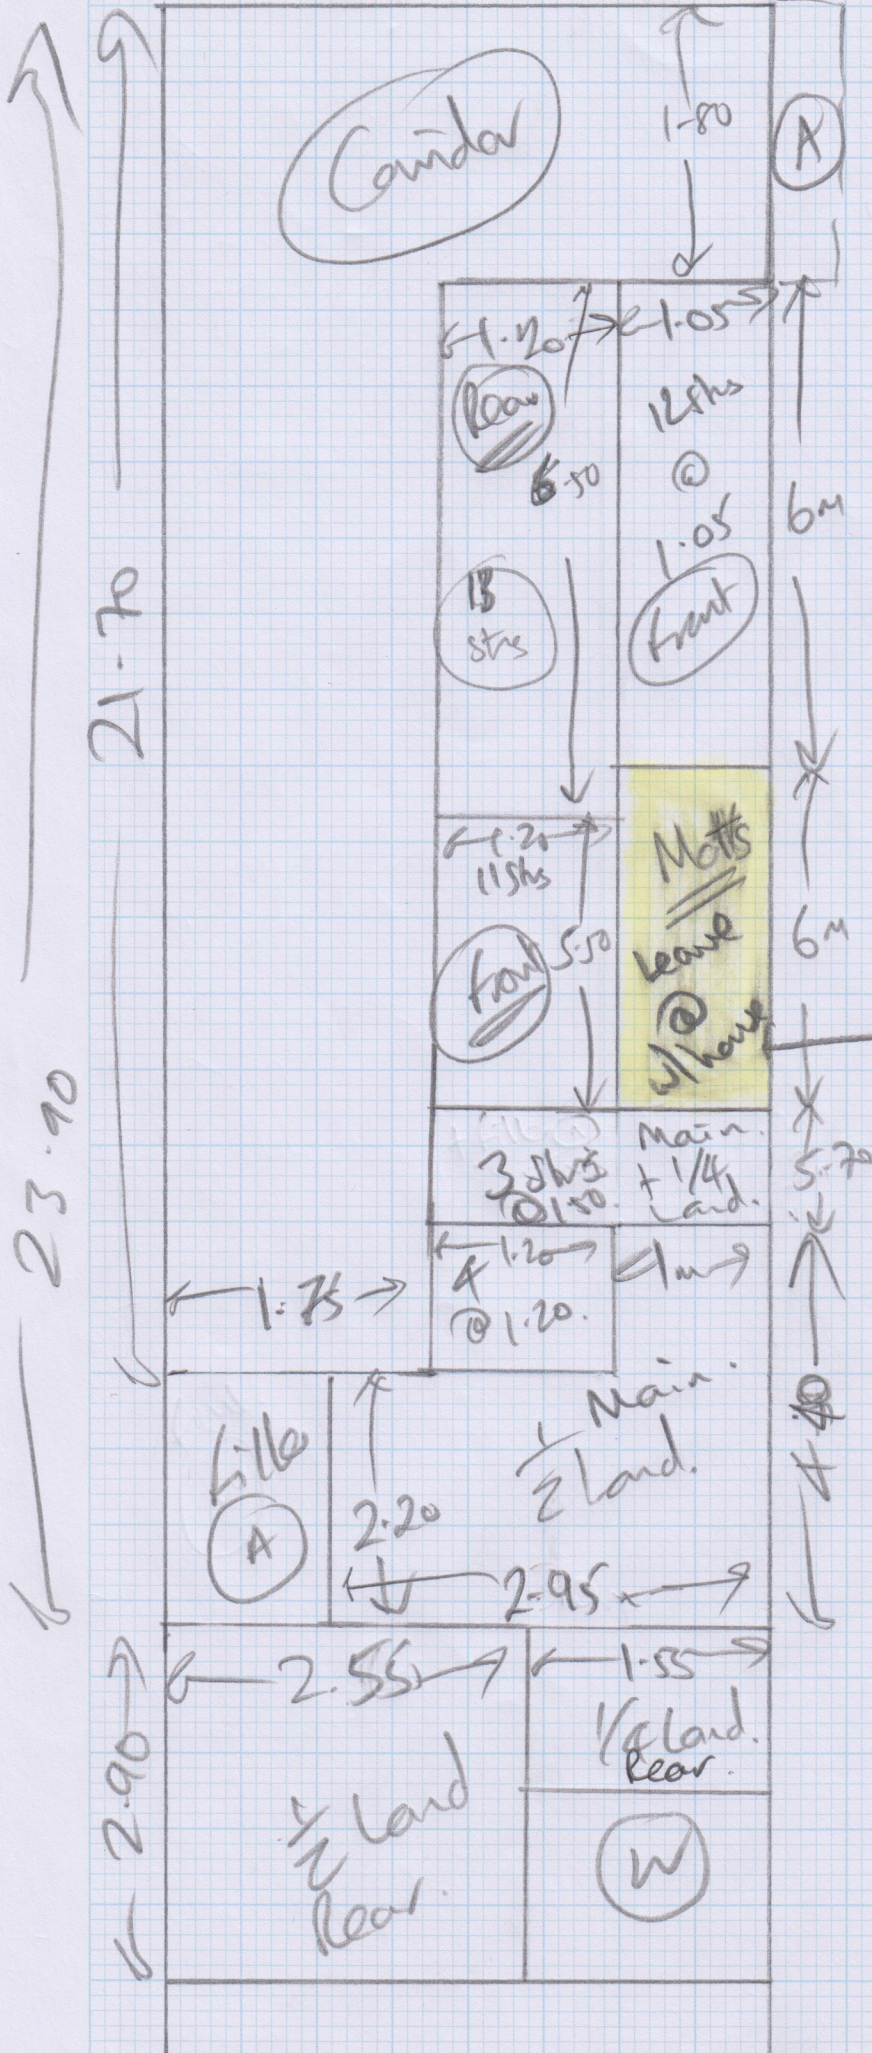

Job No: S28769
 Name: Benwood
 Address: 243a Wimboda Park Rd
 SWIR 5R5.
 Tel:
 Sheet: 2 of 3

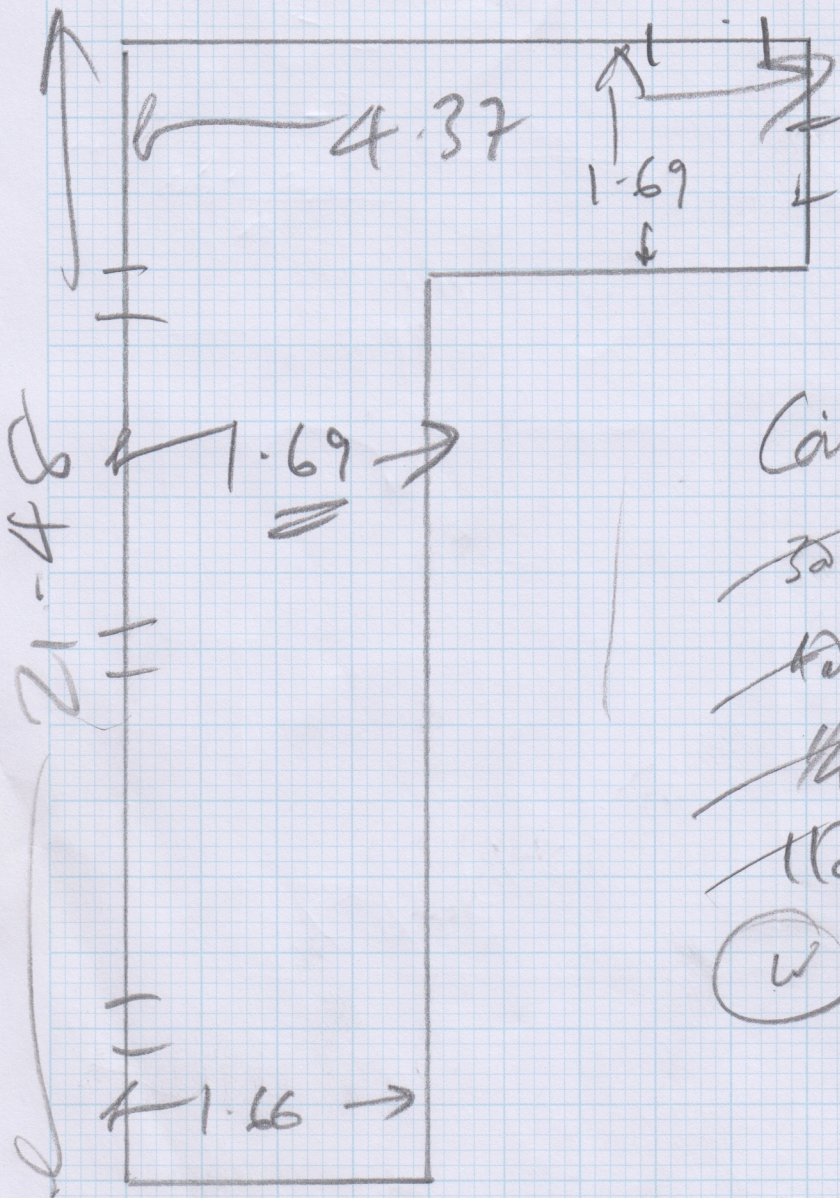

Car 1.60 x 1.69


~~30 1.28~~

~~40 1.04~~

~~1/4 1.34m x 1.05~~

~~1/2 1.04~~

Ⓢ . 820m x 1.05

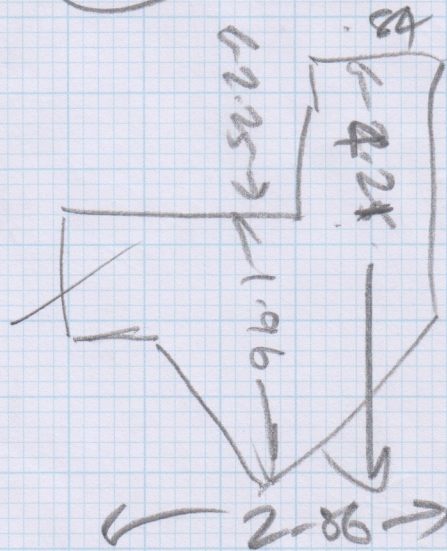

1/2 land

Mat . 80 x 1m existing

~~1/2 1.04~~

Leas Stairs

Job No: 528769.
Name: Banwood.
Address: 243^A Wimbledon Park Rd.
SW18 5RJ.
Tel: _____
Sheet: 3 of 3

~~1~~
2 Land 2-7x2x 2-36.

~~10~~ @ 1.15.

1/4 Land (52x2) 1.38.

~~30~~ - 1.15

Car Matting 1.60x1.17.

w/c 3rd October

Banwood Commercial

Mark SZAFRAN
@ banwood.net
0207223 6940.