

ATTEND INSTRUCTIONS FOR  
ALAN MONDAY 13<sup>TH</sup> NOV


S29529  
MTECHNIC

1) PUT A TOCK IN EITHER SIDE  
OF BOTTOM STEP WHERE THE  
CARPET IS ALREADY STARTING  
TO COME AWAY.

2) CHANGE W7 DUE TO CUT LOOPS  
HOWEVER FIT AS SHOWN BELOW  
AS AGREED WITH CUSTOMER

HEAT SEAM CPTS  
TOGETHER AS DISCUSSED  
WITH CUSTOMER IN  
DEPTH.

CUSTOMER DWALE  
JOIN MIGHT  
SPROUT

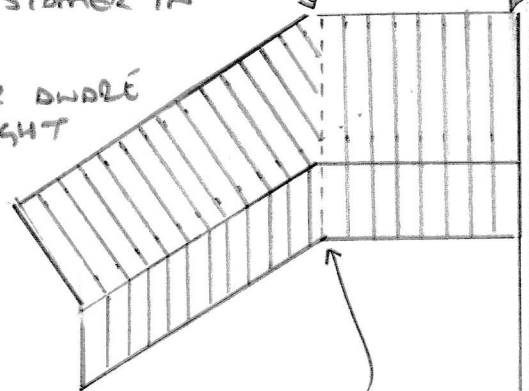

TURN CPT HERE SO IT  
IS IN LINE WITH  
STAIRS.

TURN CPT ON  
RISER AS YOU  
HAVE DONE  
ALREADY