



S30292
WOODS

S+LANDS PLAN

900 x 400

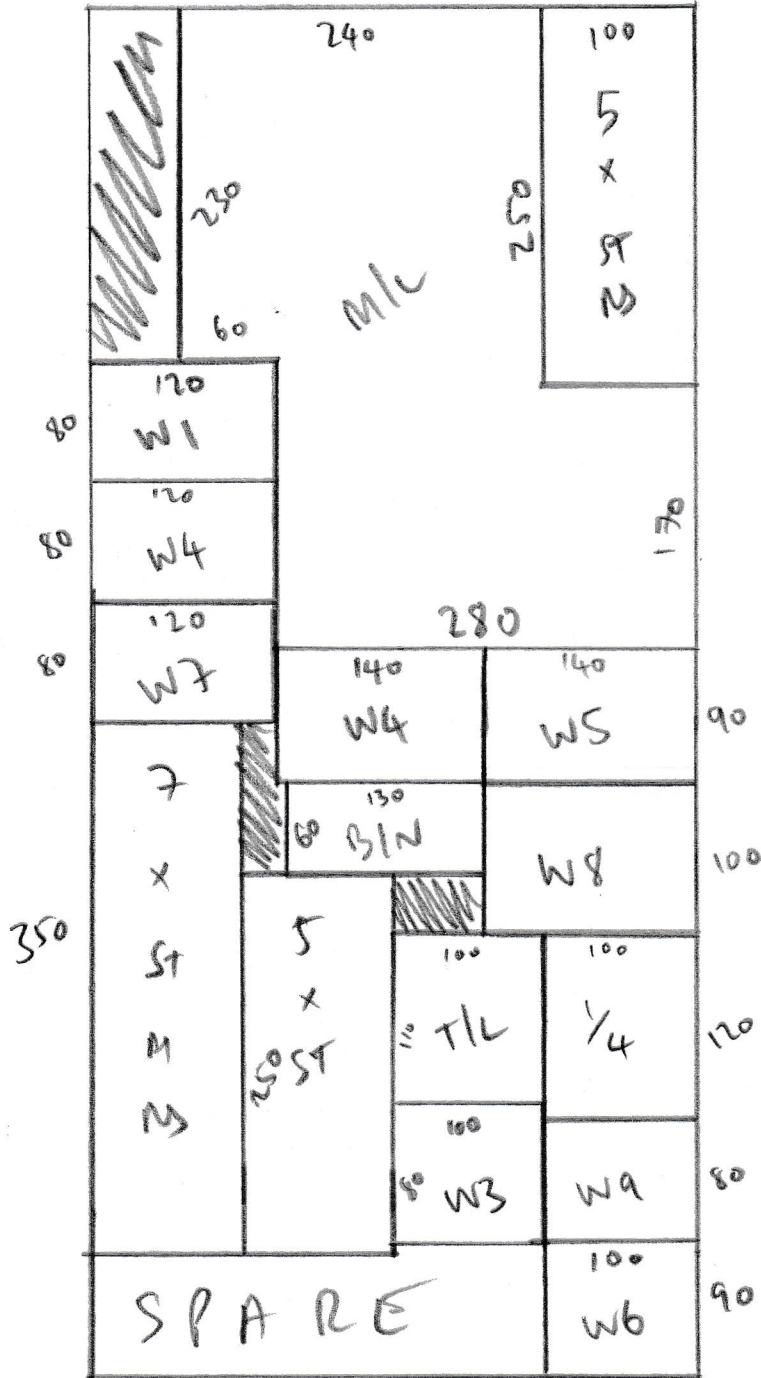

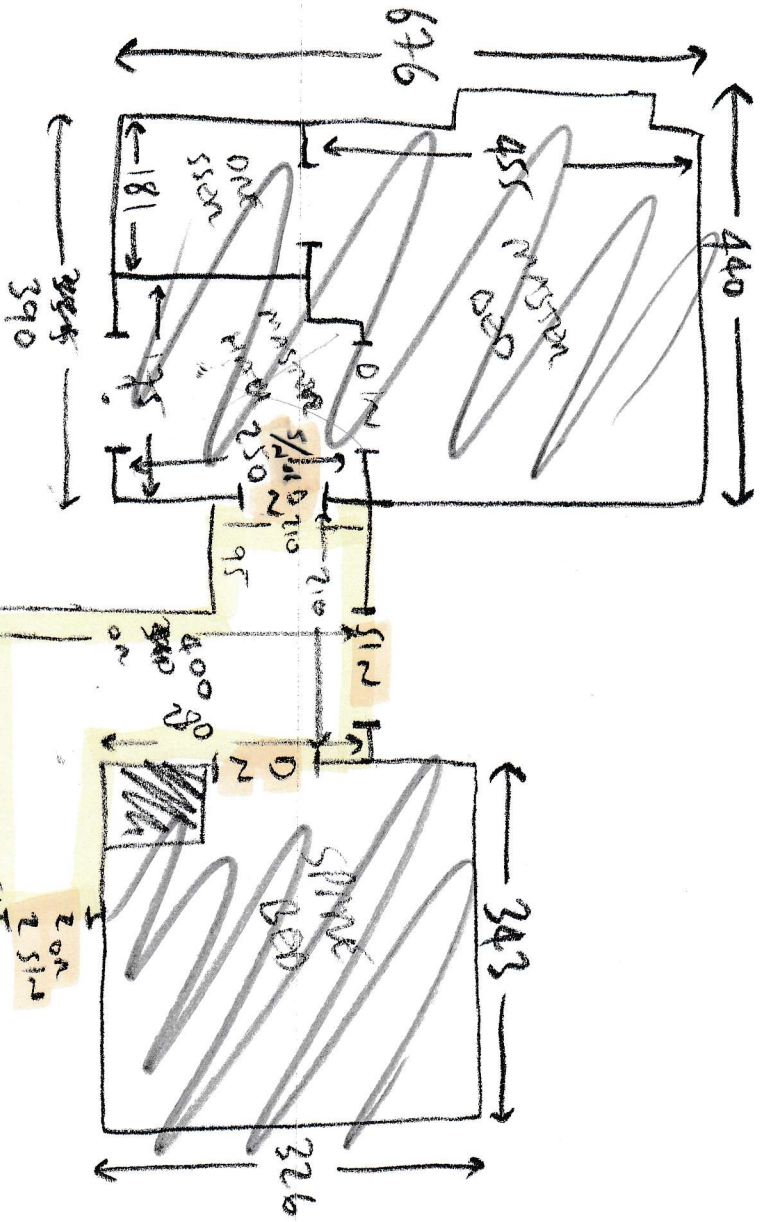

FOR MEASURE MENSURE BED, MEASUREMENTS
 ARE TAKEN BY GUIDING WORDS
 - SINGULAR DIMENSIONS EXPECTED
 FOR WOOD PANEL, NO CURTAIN, UPSTAIR BED
 PLAN TBC

- T/C = 100 or 2 x 91 ✓
- 1 x 51 = 46 x 90 ✓
- W1 = 73 x 109 ✓
- W2 = 74 x 127 ✓
- W3 = 78 x 87 ✓
- W4 = 72 x 111 ✓
- W5 = 80 x 132 ✓
- W6 = 80 x 90 ✓
- 6 x 51 x 90 = 45 x 90 ✓
- ↓ TO GINS, HOOD ↓
- W7 = 67 x 110 ✓
- W8 = 88 x 130 ✓
- W9 = 70 x 82 ✓
- 1/4 : 108 or 2 x 83 ✓
- 10 x 51 x 90 = 44 x 84 ✓
- 51 x 90 = 45 x 120 ✓