


S30663  
WOLDIE

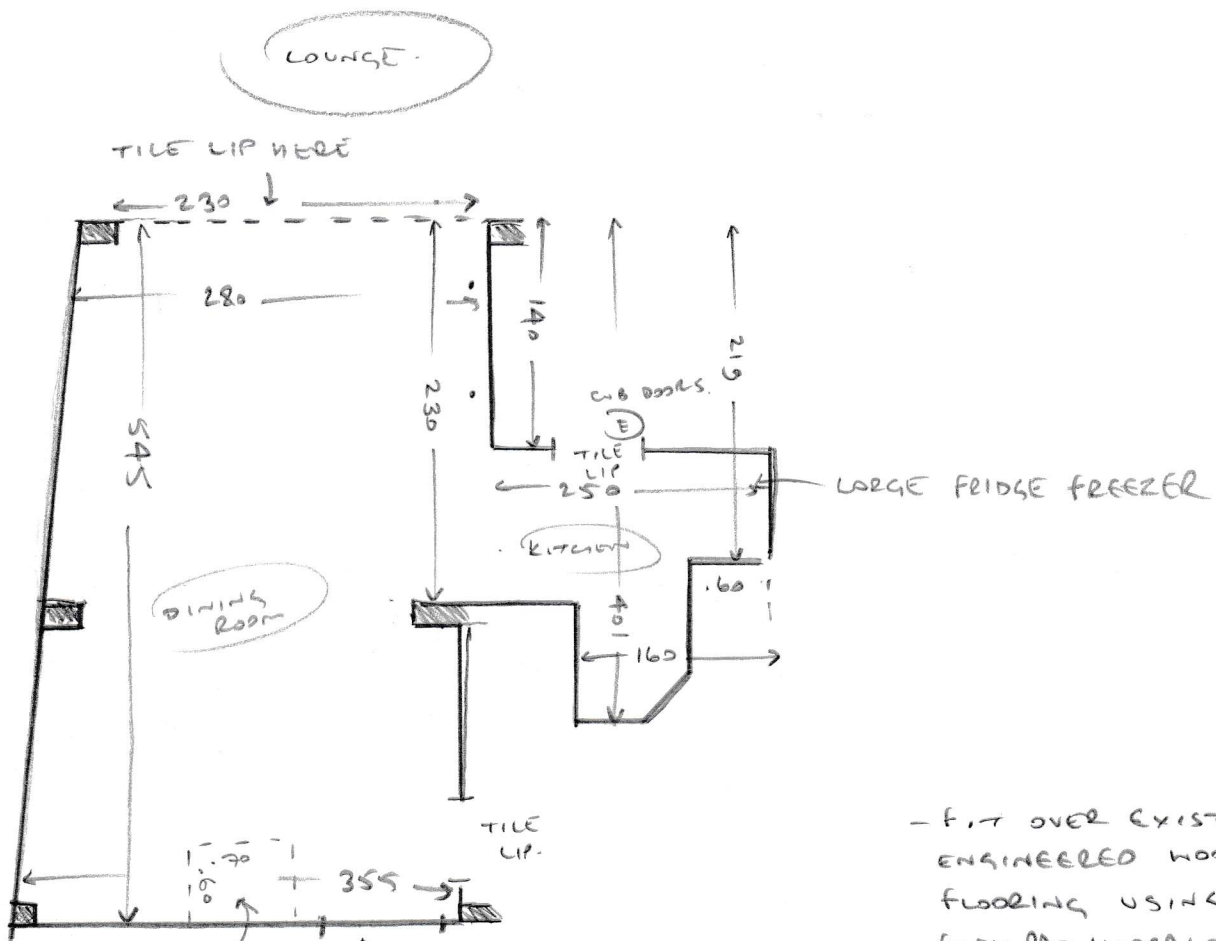

PVA EXISTING  
PLANKS TOGETHER  
AND TILE LIP  
AROUND PERIMETERS  
OF LID + FRAME

REMOVE STOP  
END HERE AND  
FIT TILE LIP.

- FIT OVER EXISTING  
ENGINEERED WOOD  
FLOORING USING  
FLEX PRO UNDERLAY.

- SLIGHT MOVEMENT IN  
EXISTING FLOOR THAT  
CUSTOMER IS AWARE  
OF DUE TO LEVELS  
OF THE FLOOR BENEATH

- WE CAN NOT TAKE  
UP THE EXISTING  
ENGINEERED WOOD AS IT  
IS FITTED BENEATH THE  
KITCHEN CUPBOARDS

