


Top Floor


Layout

S34007
Farmer

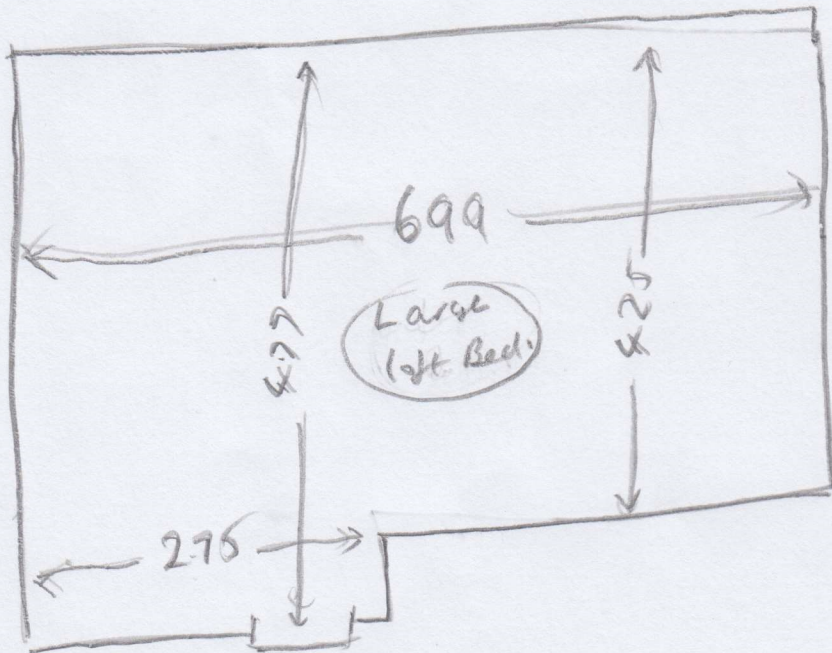

Wood
no also
needs to
no mt

9mm shim
+ sledge
at both
doors

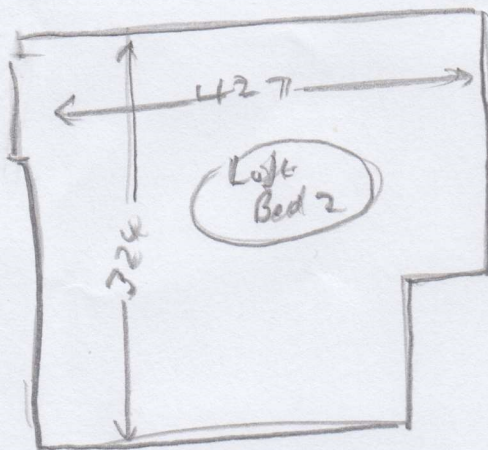

Top 1