



Job No: S34667
 Name: _____
 Address: _____
 Tel: _____
 Sheet: 1/5

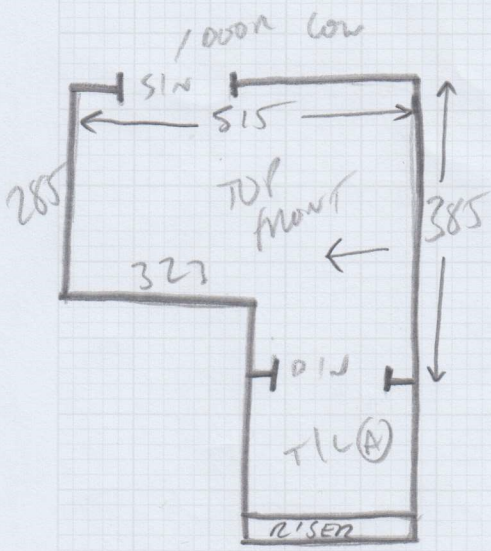

FULL WIDTH

T/L (A) = 120 OR X 90 -
 4 X ST = 45 X 90 -

T/L (B) = SEE PLAN -

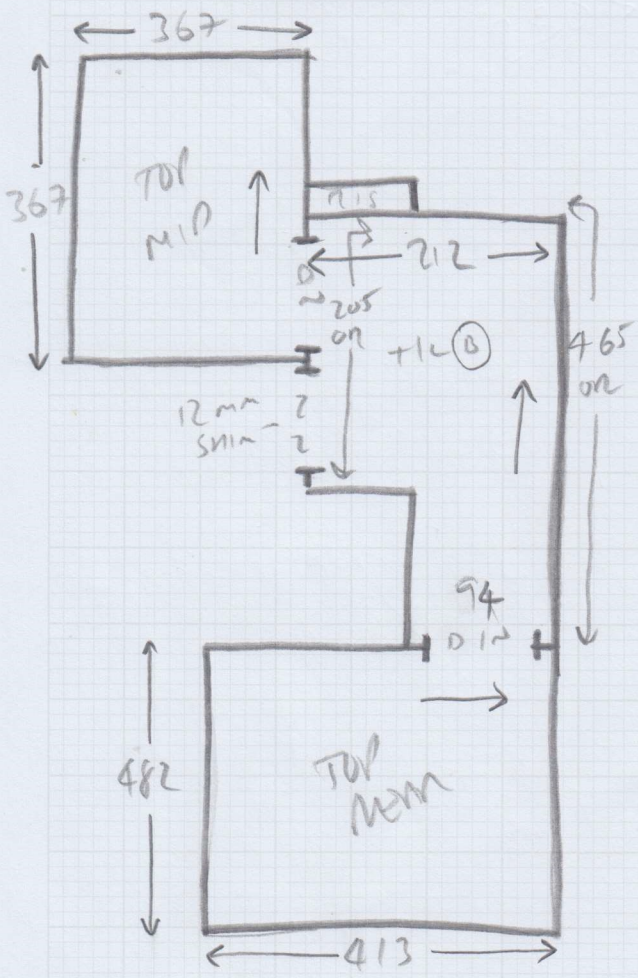

63 CM RUNNER

9 X ST = 45 X 93 -
 W1 = 82 X 123 -
 W2 = 112 X 95 -

↓ TO MAIN ↓
 Floor


Job No: 534667

Name:

Address:

Tel:

Sheet: 2/5

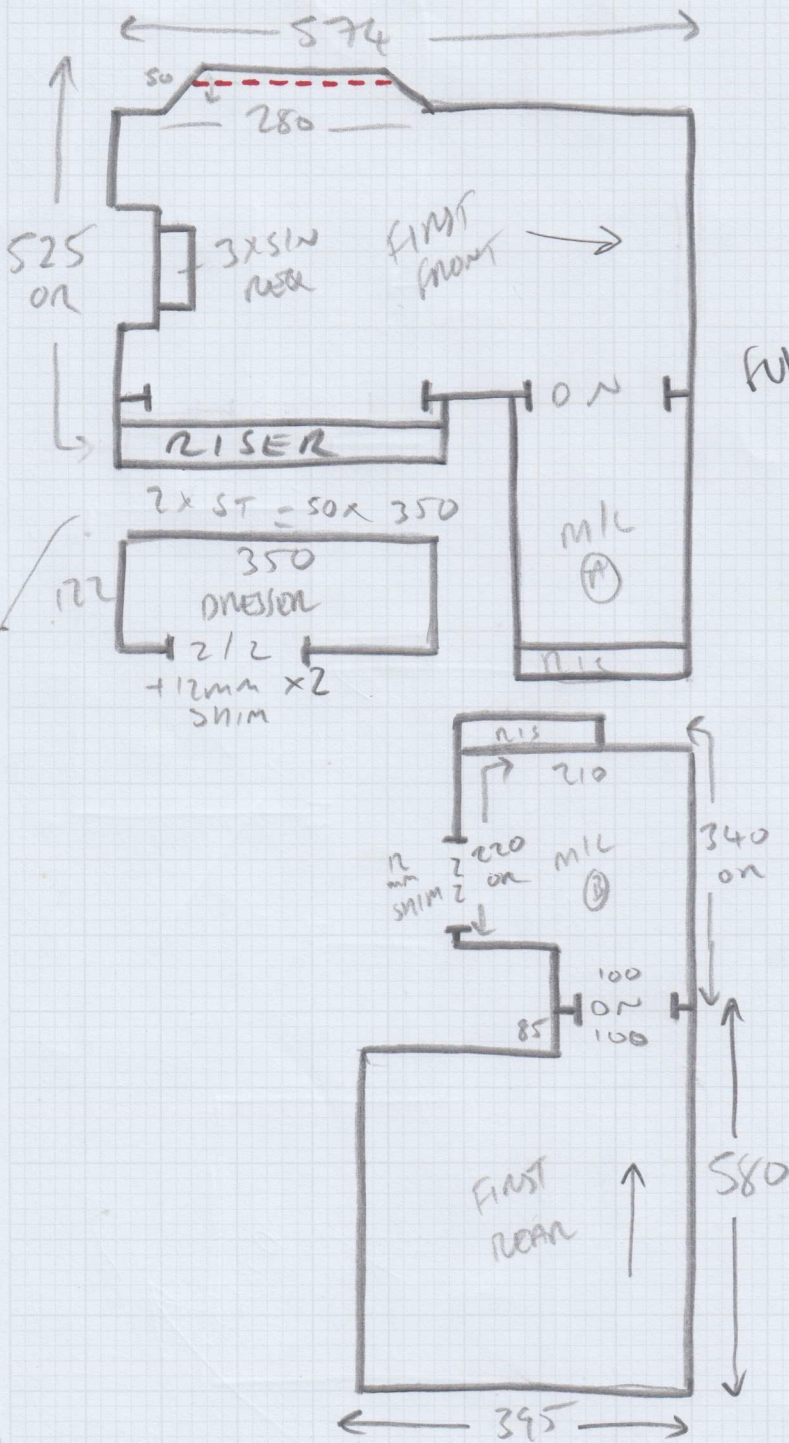

FULL WIDTH

MIL (A) = 270 OR x 100 -

2 x ST = 45 x 93 -

MIL (B) = SEE PLAN -

12.5 x ST = 45 x 95 -

W3 = 89 x 81 -

BIN 1 = 72 x 105 -

runner
63 CM

CAN SHOP IF THIS DOESN'T MAKE SENSE

RISER + 2 x STEPS DOWN TO DRESSER AREA TO BE TAPED RUNNER AS WIDE AS OPENING FROM MASTER BED

WRAP	CPT
WRAP AROUND	
TAPED	STEP
RISER	RISER
TAPED	STEP
	RISER

(A)

Job No: S34667

Name:

Address:


Tel:

Sheet:

3/5

PLAN (A)

880 x 500

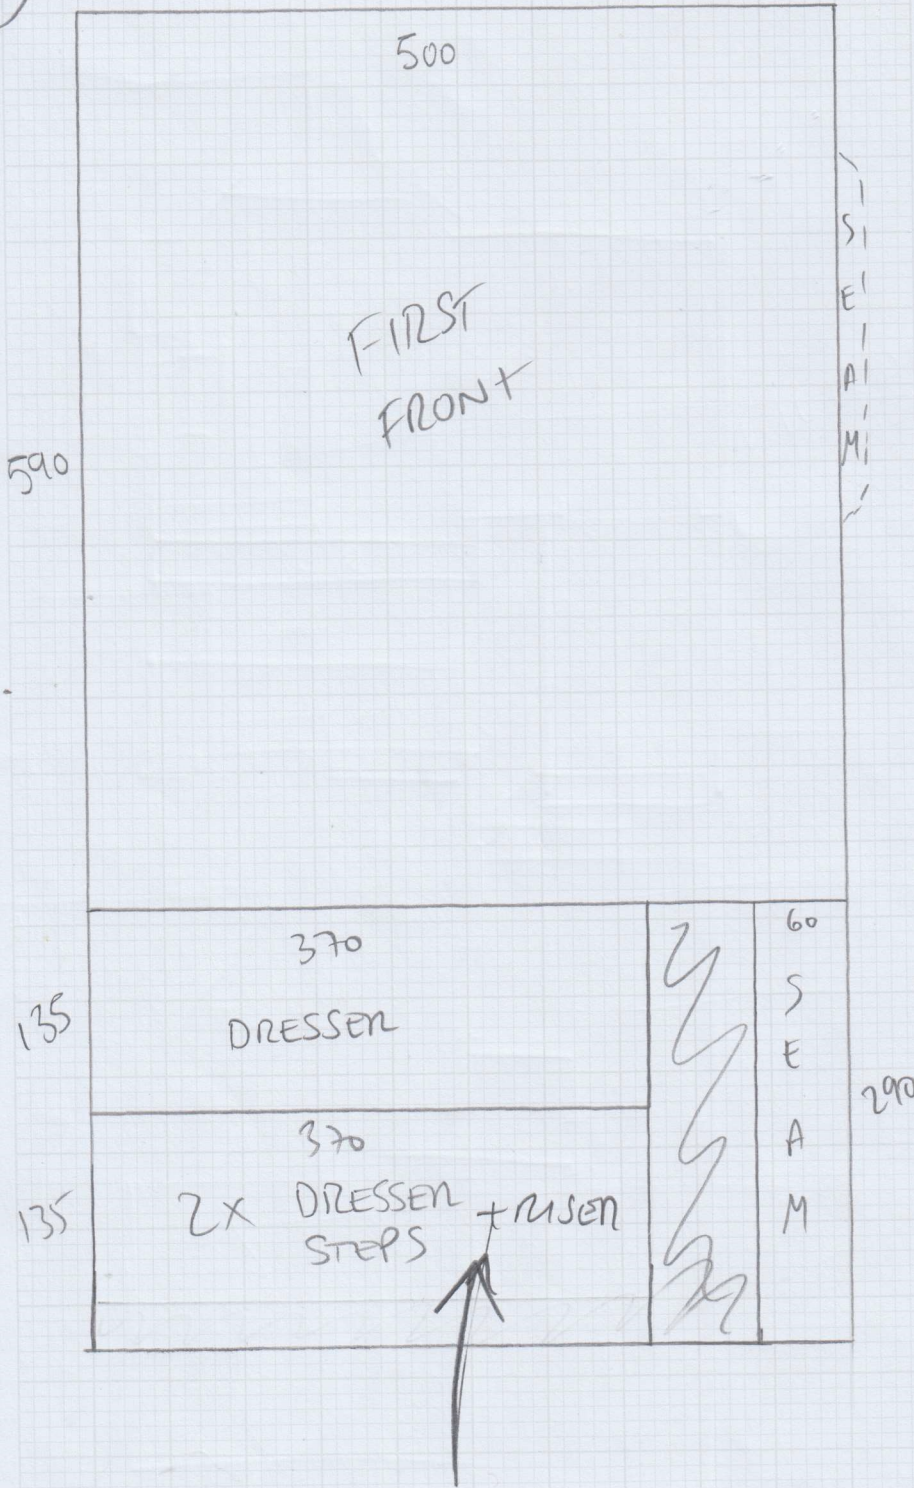

TEMPLATE ON SITE AS
 WIDE AS THE OPENING FROM
 FRONT BED TO BE TAPED + INSTALLED
 AS RUNNERS

Job No: 534 667

Name:


Address:

Tel:

Sheet:

4/5

(B)

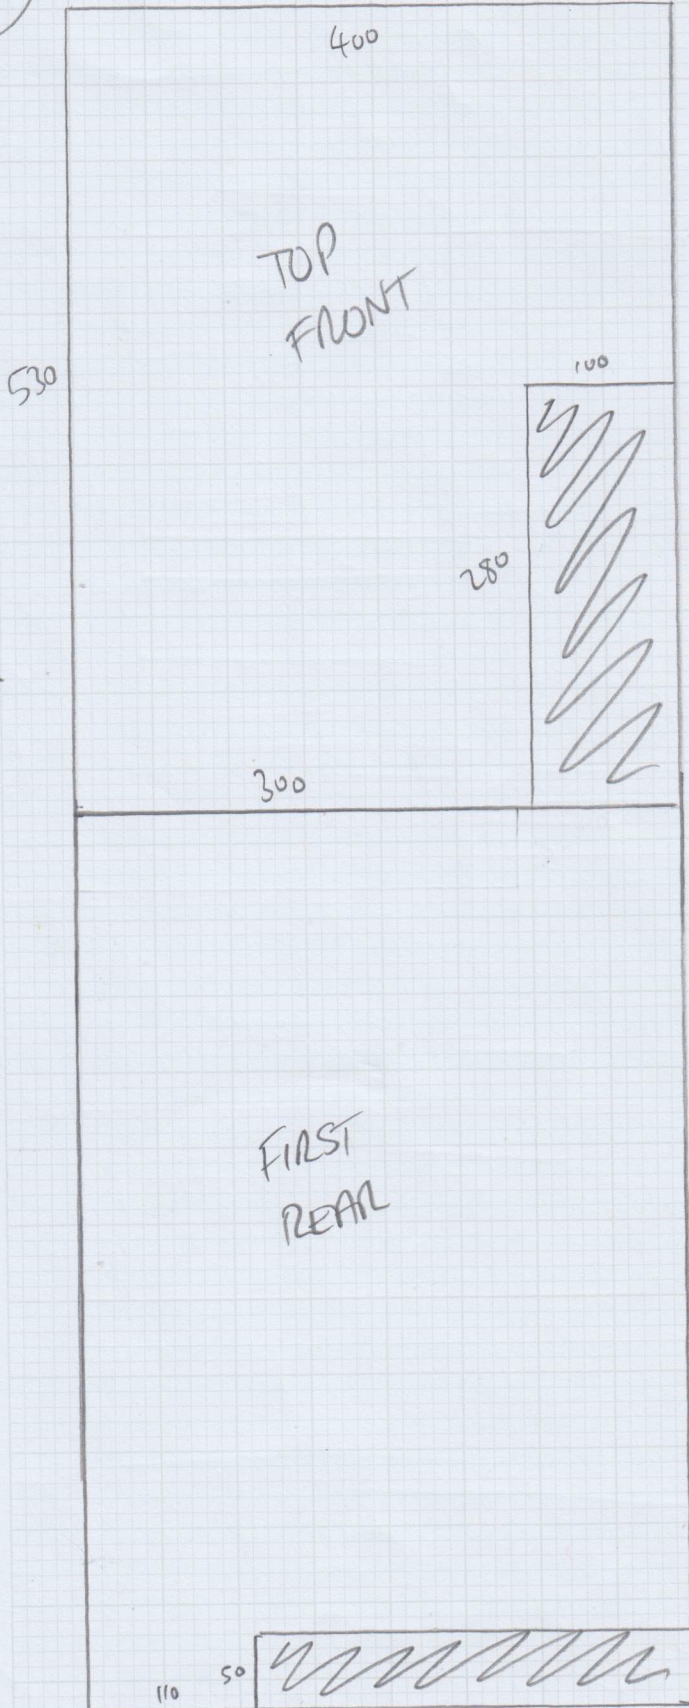

PLAN (B)

1120 x 400

CUTS

(A) = 880 x 500

(B) = 1120 x 400

TOP MID = 380 x 400

TOP REAR = 430 x 500

590

