




THE SNAP FAST FLOORING SYSTEM

Unit 15 The Io Centre, Stephenson Road, Segensworth, Fareham, Hampshire, PO15 5RU
Web: www.mototile.com | Tel: [01329 841416](tel:01329841416) | Fax: [01329 841417](tel:01329841417) | email: sales@mototile.com

Mototile Interlocking Floor Systems Installation & Advisory Notes

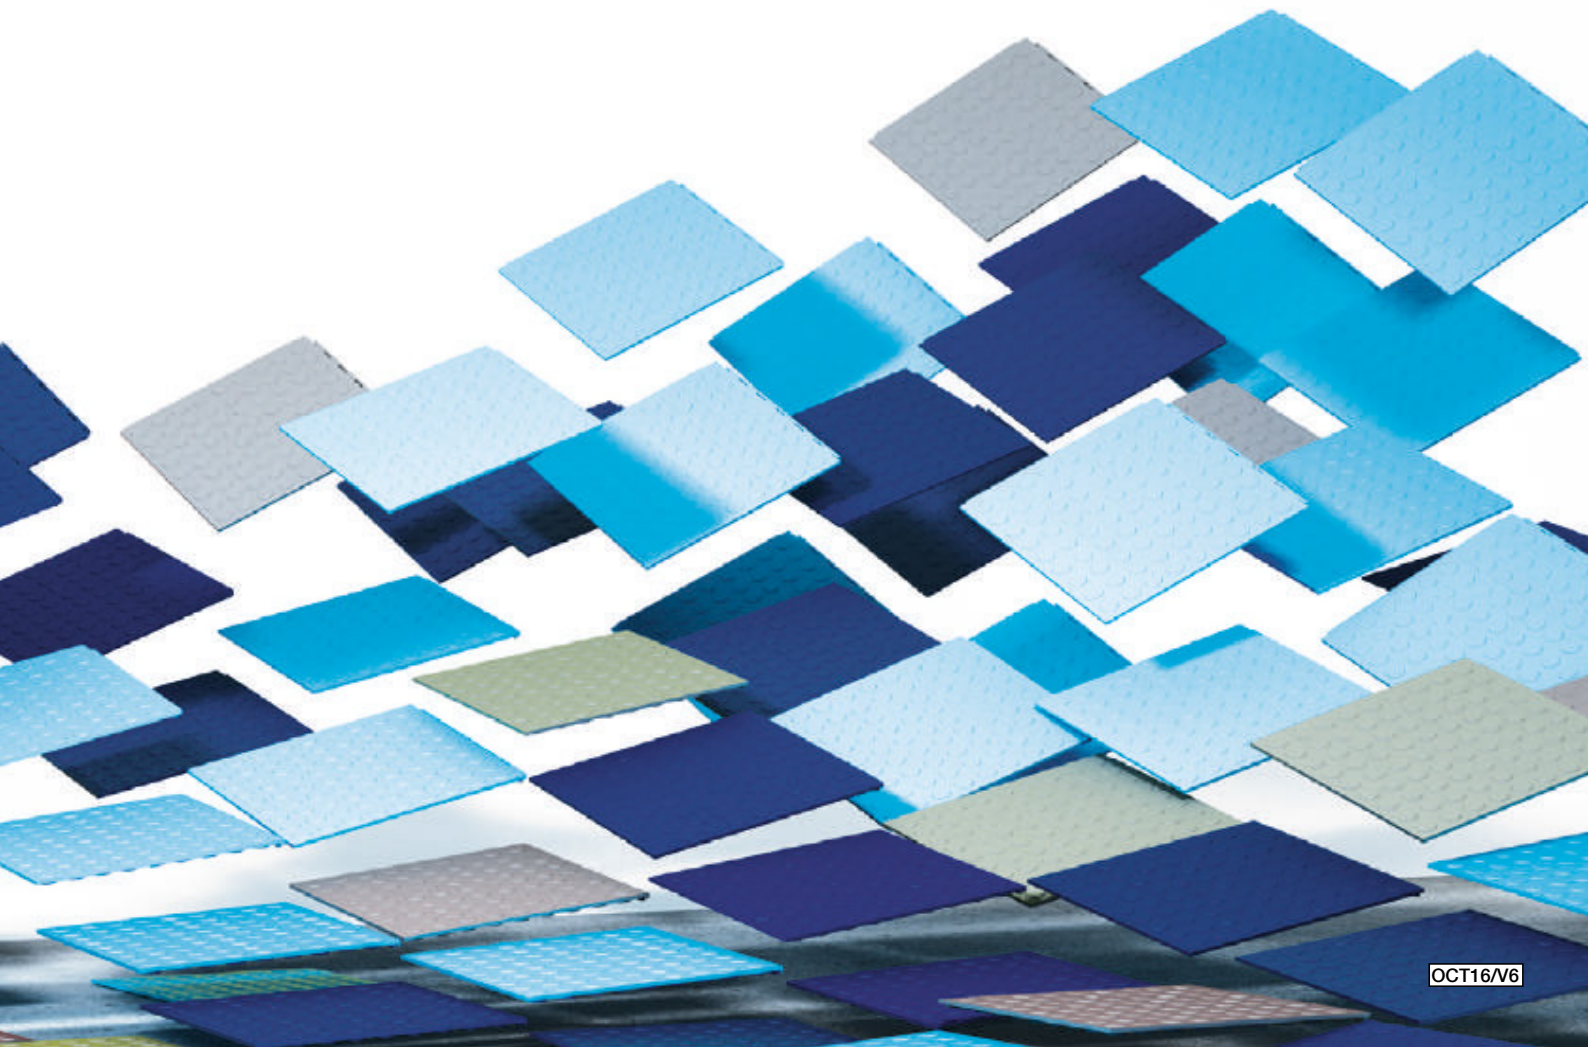



Mototile Interlocking Floor Systems Installation & Advisory Notes

These notes refer to

- **Motolock** Heavy Duty 495 x 495 x 7mm Tiles
- **MotoMat** Recycled 470 x 470 x 14mm Tiles
- **Mototile** Seamless 333 x 333 x 7mm Tiles

Mototile seamless and Motolock heavy duty are suitable for indoor use only with MotoMat suitable for indoor or outdoor use. All tiles can be laid generally over any hard, clean and level surface.

To get the best results for your new floor and to ensure a trouble free and long working life from the tiles we offer the following guidelines and advice. Many of the issues we mention are common to all PVC based tiles or floor paints but we have tried to minimize them in our designs.

Witness Marks and Surface finish

As with all PVC Tiles the method of manufacture may Result in a witness mark being visible in the tile at the central injection moulding point and also along the flow lines from the centre and around the external edges of the tile, this mark is unavoidable.

Please check the tiles before you commence laying, if the marking is unacceptable to you do not continue with installation as we will not accept responsibility to replace or refund the cost of any goods after 5m² or more Have been installed if the markings are subsequently deemed unacceptable to you.

Colour match, traceability and batch control

Each order is supplied fully from a single batch and we cannot guarantee perfect colour consistency, to a level of 100%, between batches. Should you wish to purchase additional tiles at a later date we cannot guarantee subsequent orders will be supplied from the same batch.

The batch number is clearly shown on your paperwork, which you should retain for reference.

Basic Installation & Advisory Notes requirements for all ranges

Sweep and / or vacuum through the floor so you can inspect it Fill any substantial holes or cracks in the floor and remove any protruding lumps and bumps If the floor is a tampered effect we would advise you to screed the floor to get the best level finish.

Eg. With a rapid cure self-levelling compound. The flatter and smoother the floor the better the end finish will be.



Basic Installation & Advisory Notes requirements for all ranges continued...

All PVC based tiles expand and contract as temperatures change. At very low temperatures the tiles become harder, less flexible and subject to contraction while, at high temperatures, the tiles become softer, more flexible and subject to expansion. With this in mind we offer the following advice.

The minimum recommended temperature for installing the tiles is 15°C

You must always leave the tiles to acclimatise before laying them. Open up all the boxes, spread the tiles evenly still in the boxes over the area you will be laying and leave for a minimum of 24 hours before commencing fitting. This process also enables you to check tile quality & quantities before you begin fitting.

When fitting allow a minimum 5mm expansion gap between the floor and fixed points like walls, piers or around very heavy objects (e.g. racking, work benches etc.) to allow for any slight expansion or contraction due to temperature changes.

Do not try to install directly after you have received your delivery - be patient!

Tiles can be laid without using adhesives for most applications although there are some circumstances, noted below, where gluing certain tile areas to the floor is advised.

For example

You may need to glue down tiles that are exposed to prolonged direct sunlight, which may cause tiles to become displaced as they soften and expand more quickly than the rest of the floor area, such as shop fronts, south facing, glass doors etc.


If the tiles will continue through a doorway into an adjacent area we recommend that these tiles be glued down.

If you need to use full or nearly full steering lock when driving into the garage then tiles may be twisted out of their interlock and have to be refitted. We recommend that you glue down tiles that could experience strong turning forces.

And on the Motolock heavy duty range if you are using fork lifts or heavy trucks with small wheels or in front of ovens where the floor maybe come warm and expand.

Tools required

All you will need to lay the tiles in most cases are: A white non-marking rubber mallet, which we can supply a hand saw, Stanley knife or a power jigsaw for cutting.

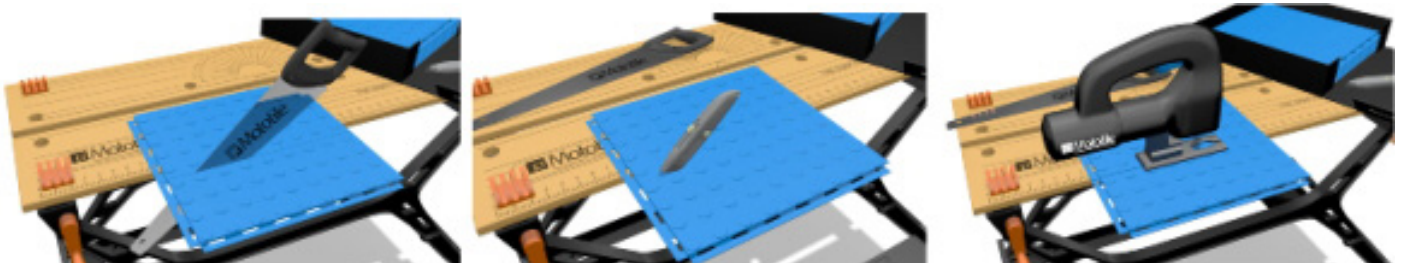



Floor installation tips

NOTE: This guide assumes you are fitting tile ramps in the garage entrance. It is strongly recommended that you do fit tile ramps to protect the edges of the garage flooring, to stop movement of the tile 'mat' and to prevent a trip hazard.

From test installations we have found that the method suggested below usually has the quickest floor laying time combined with the most satisfying finish, especially where patterned garage flooring is being laid. One alternative we have used is to fit the tile ramps first and then install the tiles later.

Tools you will need:


Tape measure, stanley knife, board to cut tiles on. A non-marking rubber mallet and a steel or similar straight edge may be useful.

Stage 1 - Start at the door and draw a threshold line:

From inside the garage, with the door(s) closed, establish the line **which the front of the tile ramps must not cross** so that the door can be closed properly once the ramps are installed.

We will call this line the threshold line.

Mark this line clearly for later use and re-open the door(s).

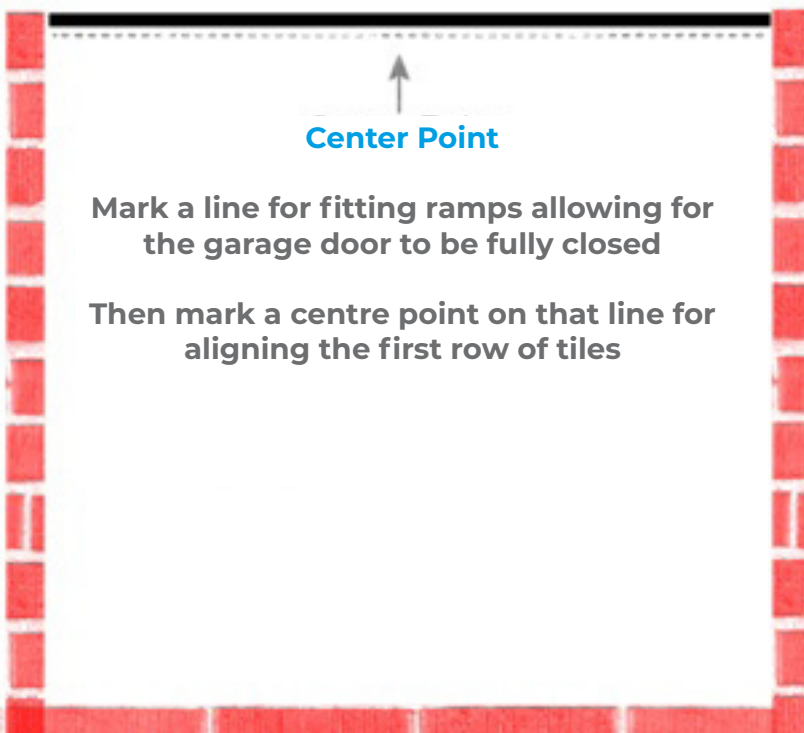




Stage 2 - Draw a tile ramp line and mark the centre:

Align the front edge of a length of ramp carefully with the threshold line and determine a new line where the tiles and ramp will butt together in the finished installation. We will call this the tile ramp line.

When you determine this line allow for the fact the tile ramp has a lip that fits under the floor tiles.

Run a tape measure along the tile ramp line and mark the centre point.

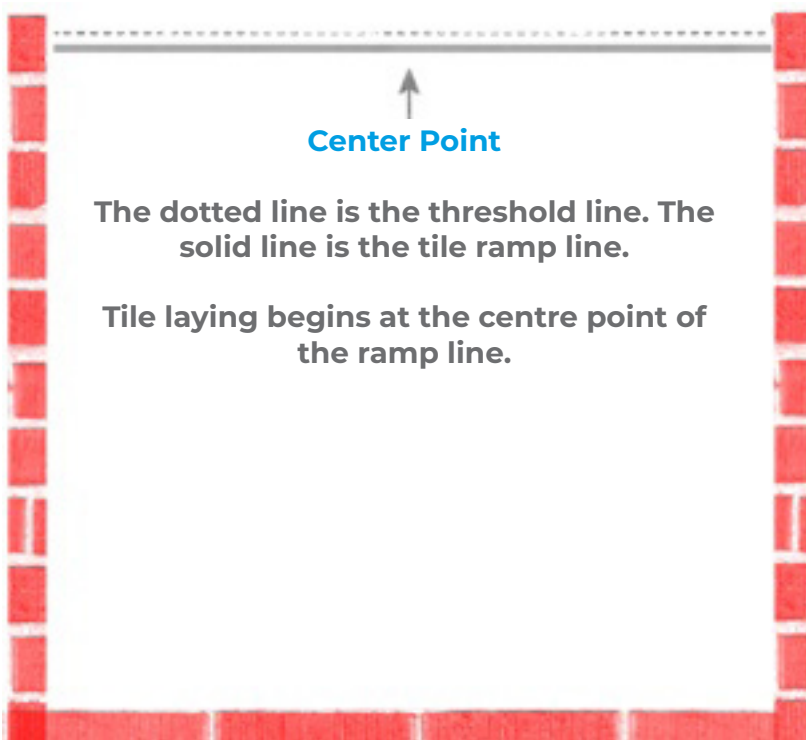




Stage 3 - Start laying tiles:

Lay your first tile so that the front edge of the tile sits where you propose to have the back of the ramp. Align your first tile's centre to the tile ramp line's centre point.

Then work out from this tile to the side (eg the right) laying across one tile at a time until you reach the point where you have a gap smaller than a whole tile before meeting the garage wall.

Leave this gap and all subsequent ones. **Making all tile cuts at the very end speeds up and simplifies laying the flooring.**

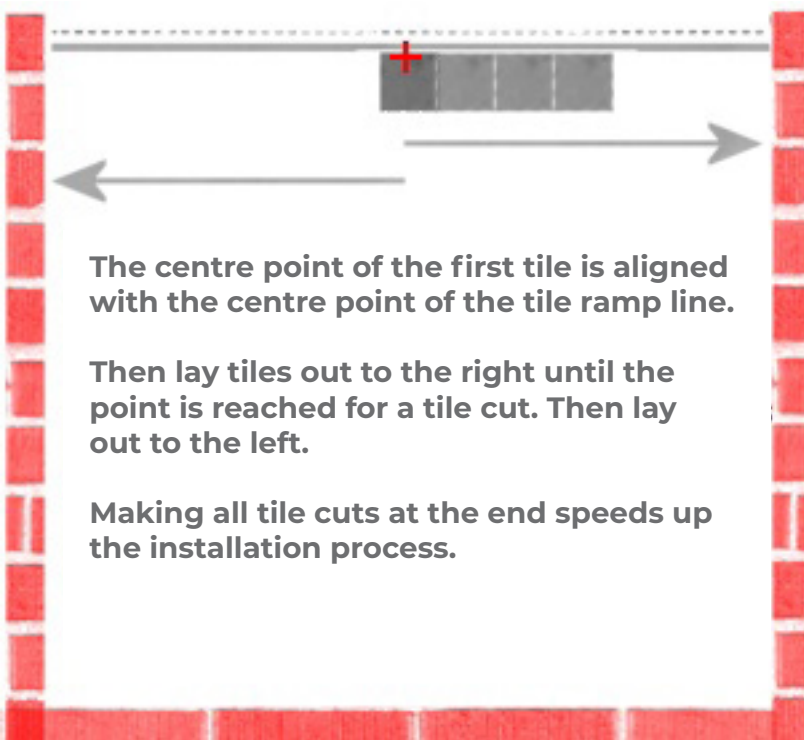

Now lay tiles out to the opposite wall of the garage, repeating the process above.

Once the first row is complete then commence laying the next row back in the same manner.

Repeat this until all uncut tiles are laid and you have a small gap from the back row of tiles to the wall.



Stage 4 - Straighten the tile mat and align to ramp:

You now have the opportunity to straighten the whole mat you have assembled and realign if required.

Now fix ramp to the required position at the front of the garage (a good quality construction adhesive is recommended for final fixing of ramps) - if required pull the tile mat forwards so that the front row of tiles sits onto the ramp.

Stage 5 - Perimeter tile cuts.

You may now commence laying the cut tiles around the walls' perimeter. We used a stanley knife for all our cuts in a test installation.


Start at the front of the garage again. Measure and cut the first row tile on the right. Allow for a 3mm expansion gap between tiles and wall. The repeat this process on the left hand side tile on the first row.

Repeat the process above for the next row back and continue until you get to the final row against the back wall of the garage.

Experience has taught us to lay the tiles in the left and right back corners last (ie. the tiles farthest from the first tile laid).

Measure, cut and fit all the other tiles on the back row then carefully measure, cut and fit the last two corner tiles.

That's the garage floor laid and ready for use, unless you are also fitting skirting.

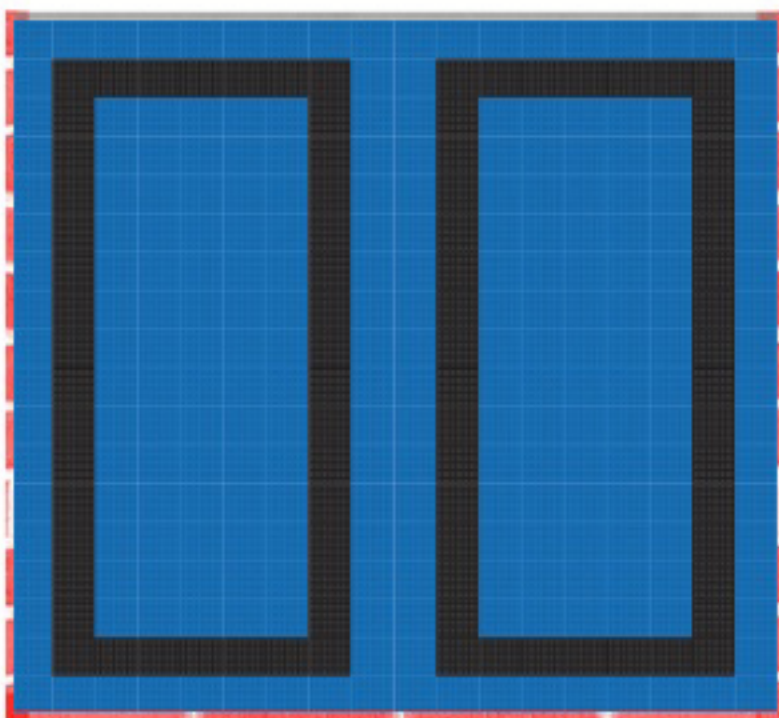



After Care Advice

Cleaning and Maintenance and General use

Regular light cleaning once a week is better than a heavy clean once a month. Brush or vacuum the floor first then sponge mop using a normal household, non-abrasive, floor cleaning detergent (neutral ph.) at a weak concentration. Use a damp mop rather than soaking the floor with a lot of water.


Catalytic converters and exhaust systems can get extremely hot so we recommend that you don't leave your vehicle parked and running on your Mototile floor as tiles could overheat and become displaced or damaged. Vehicles with a low ground clearance should be allowed to cool off before driving onto the tile floor to avoid deformation or damage to tiles.

Tyre marks and stamps

Tyres may, sooner or later, mark or stain the tile due to a chemical reaction between additives in the tyre compound and the plasticizer used in the production of the tile. This staining reaction can occur with most floor coverings including tiles, vinyl and paints.

To reduce the risk of tyre marking consider using Black or Graphite Grey tiles in the areas where your wheels will sit. Should staining occur it would be less obvious or visible on darker coloured tiles.

We cannot predict if or when a tyre compound reaction may occur and do not consider tyre staining to be a defect in the product so we are unable to replace tyre stained tiles free of charge. We have tested acetone for removing tyre stains and found it to be very effective.

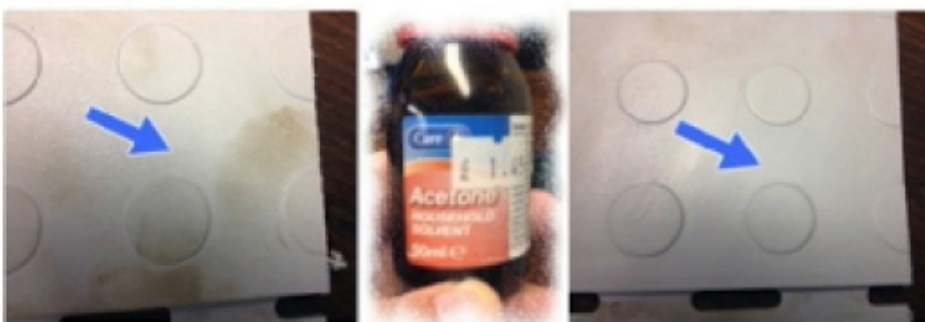

If you feel that your floor is likely to have staining regularly from tyres, chemicals or hair dyes etc.

Please contact us and we can recommend a suitable anti stain sealer.

Pressure Points - Car Jacks and Bike Stands


PVC based tiles will compress under heavy loads concentrated on a small area, such as car jacks, bike stands, fork lift trucks etc. but will always return to their original shape. We recommend that you use a suitable board beneath jacks and stands to spread the weight evenly over a wider area.

The Motolock Heavy Duty tile is the only tile that we recommended for use in Industrial applications



Motolock Heavy Duty

Please ensure that you start with the logo shown on the reverse of the tile always in the same position for each and every tile

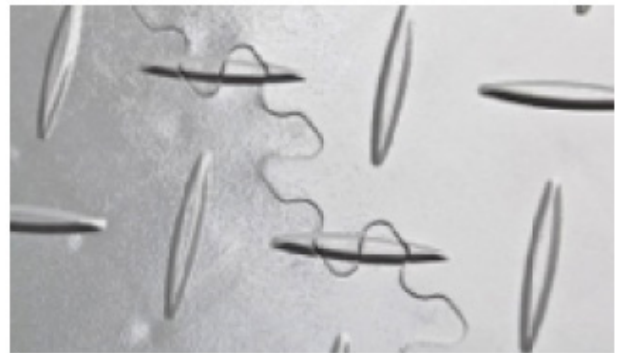

Please do not force the tiles together, offer up the corner of the tiles and using the non-marking rubber mallet tap the joints together gently, if tiles are not locking together without a lot of force then they may not be properly aligned or you are doing something wrong.

You should leave an equal gap on the left hand side and the right hand side before the walls

We suggest that you do a complete row across the width of your garage first, then work towards the rear of the garage in a left to right manner completing each row fully before commencing the next row, don't forget to leave an equal gap on both sides for the cut tiles to be fitted to later.

There is no hard and fast rule whether you install the ramp first or last. The advantage of installing the ramp at the end but before doing final cuts is that it then allows you to physically move the complete mat (2 people generally required) to align in case the walls are not square, please ensure that if you do need to move the mat that you keep the equal gap on the left and right hand side.



Generally there is no need to secure the Motolock ramps unless it will be exposed to prolonged direct sunlight, which may cause the ramps to become displaced as it softens we would suggest that you glue down using a high temperature contact adhesive. The ramps lock in line with each tile.



We now suggest that you leave the floor to settle for 24 hours before commencing final cutting and fitting of tiles around your perimeter. Generally the tiles that you cut to size from the left of the garage, the offcut can be used on the right hand side of the garage.

When measuring the tiles to cut we would suggest that you use three measuring points on each tile.

If cutting the tiles with a knife make sure it has a sharp blade. It is better to make several light scoring cuts rather than one heavy cut.


Consider creating a cardboard template from the boxes the tiles came in for any difficult shaped cuts.

If the tiles are to continue through a doorway into an adjacent area we would recommend that these tiles are glued down, consider undercutting wooden door jambs by sliding the tiles underneath for a neater finish.

When fitting the tiles allow a minimum 5mm expansion gap between the floor and fixed points like walls, piers or machinery to allow for any slight expansion or contraction due to temperature changes.


Instead of using a caulk at the expansion gap around the perimeter consider using Mototile skirting, with its hidden fixing, which can be matched or contrasted with the colour of your tiles.

If you are making a picture frame effect you will need to mitre the ramps at each corner, you will also need to purchase 1 extra ramp for each corner you intend to do. See template on last page for internal and external cuts.

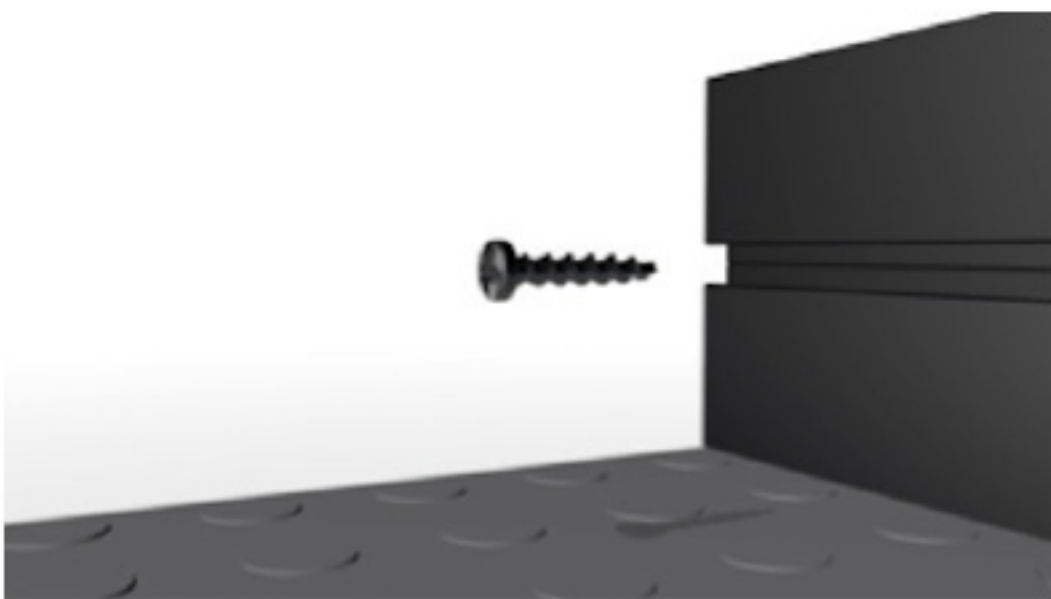

Mototile - Skirting

Cutting edge from the ramp

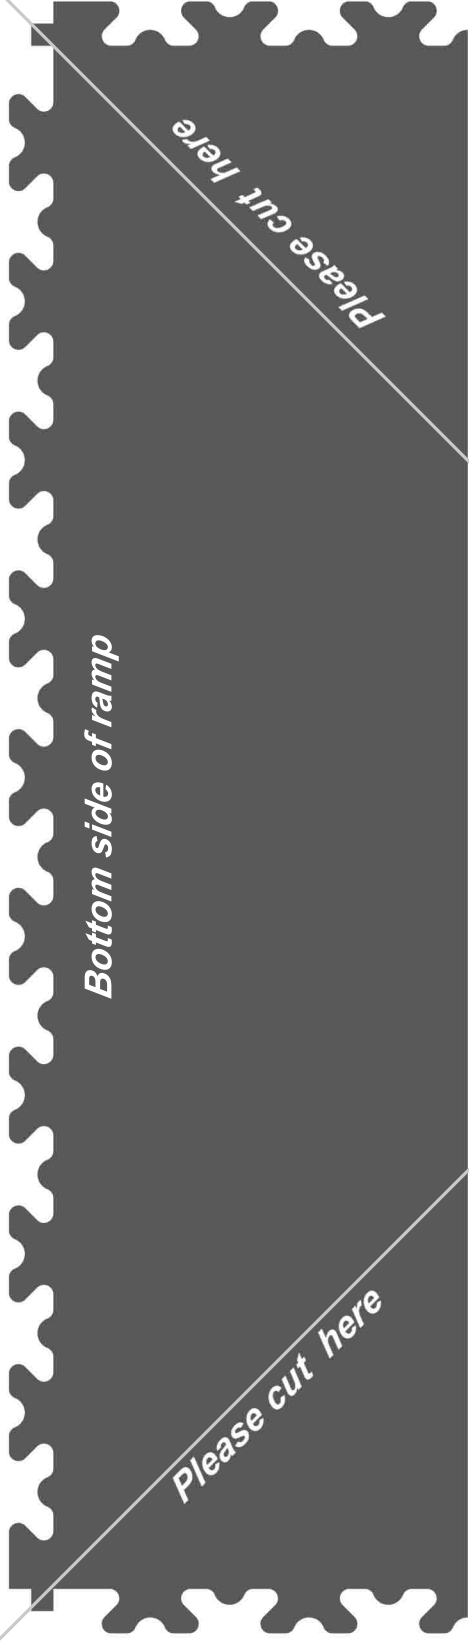


Bottom side of ramp

Please cut here

Please cut here

Motolock Template

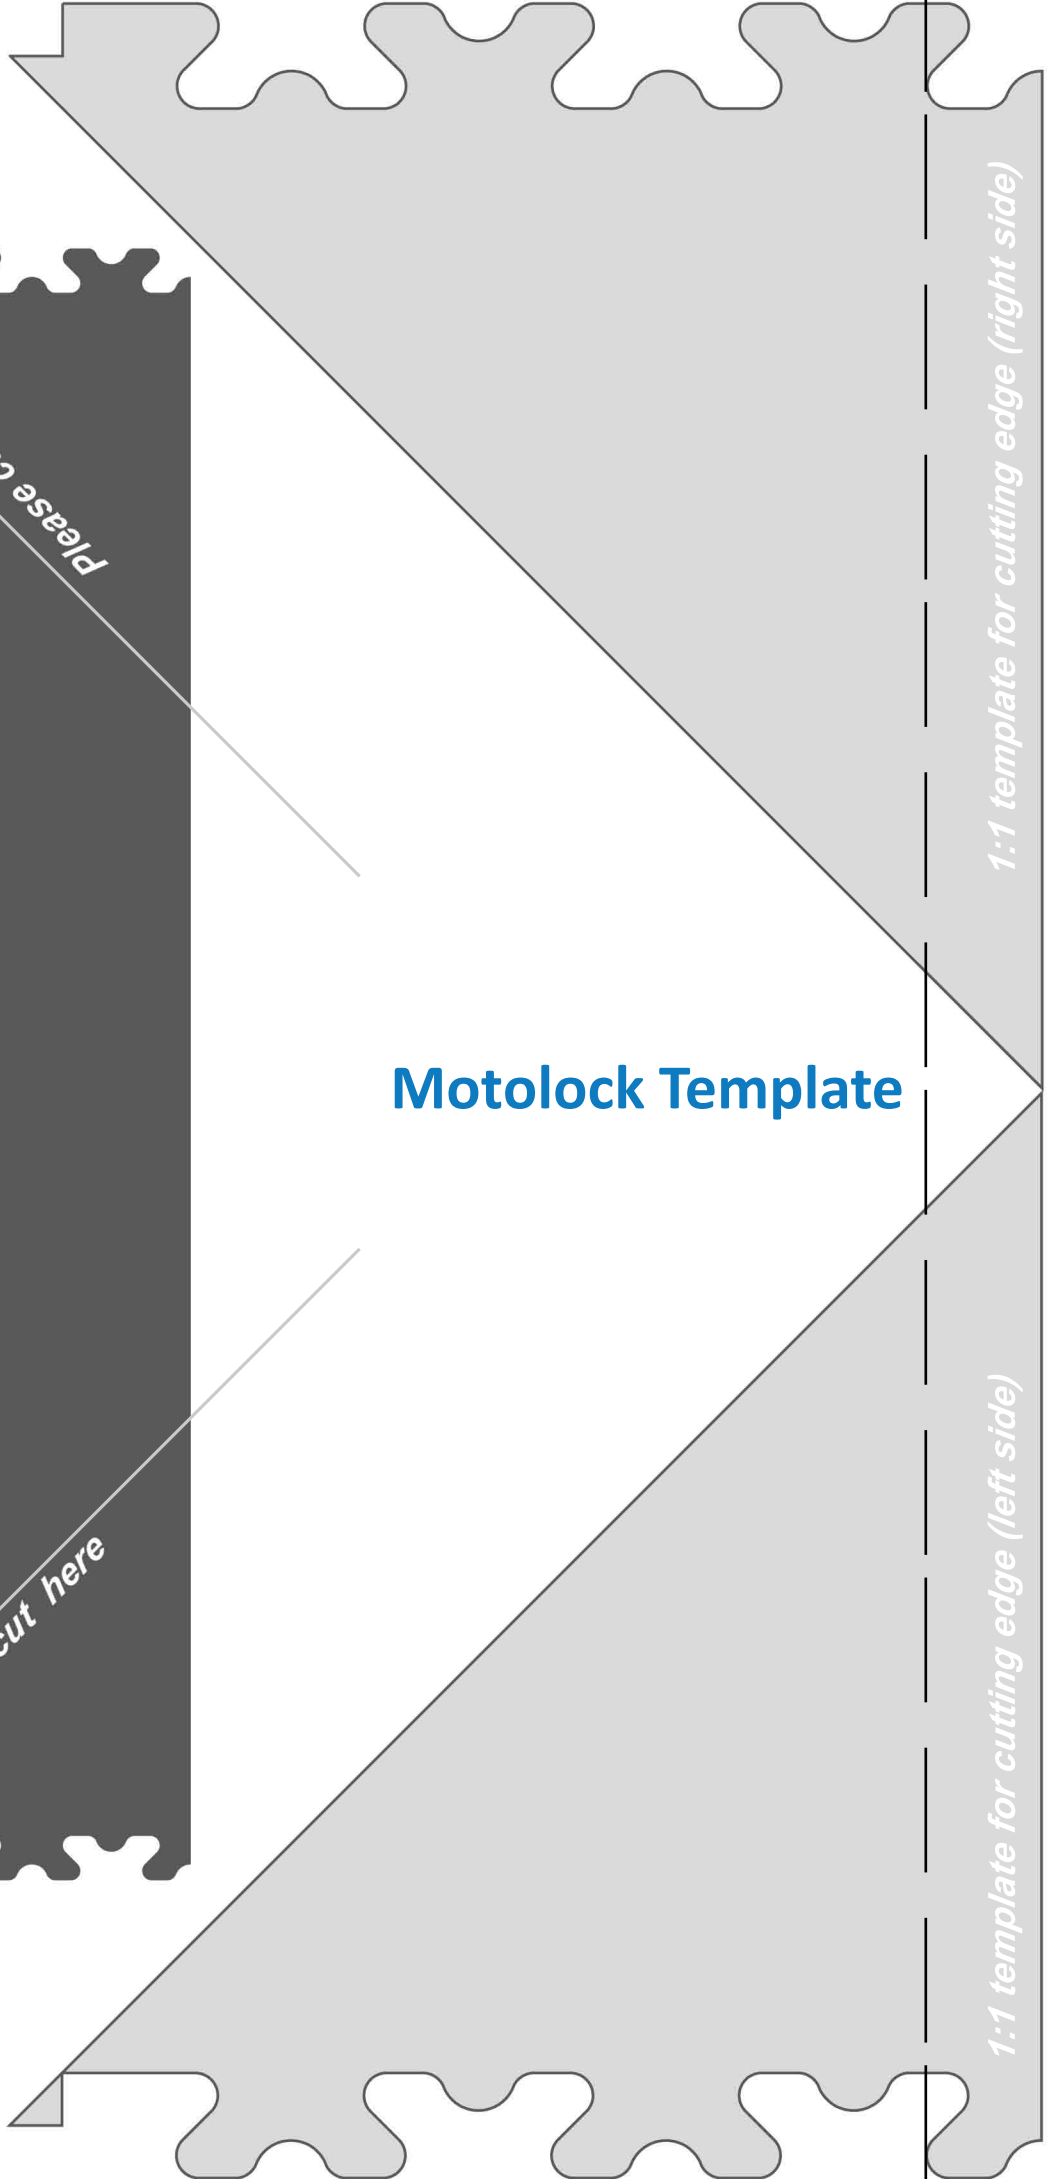

1:1 template for cutting edge (left side)

1:1 template for cutting edge (right side)



Motomat – Recycled

Please ensure that the triangle corner is always in the same position for each and every tile.



Please do not force the tiles together, offer up the corner of the tiles and using the non-marking rubber mallet tap the joints together gently. If tiles are not locking together without a lot of force then they may not be properly aligned or you are doing something wrong.

You should leave an equal gap on the left hand side and the right hand side before the wall.

We suggest that you do a complete row across the width of your garage first, then work towards the rear of the garage in a left to right manner completing each row fully before commencing the next row, don't forget to leave an equal gap on both sides for the cut tiles to be fitted to later.

There is no hard and fast rule whether you install the ramps first or last. The advantage of installing the ramps at the end but before doing final cuts is that it then allows you to physically move the complete mat (2 people generally required) to align in case the walls are not square, please ensure that if you do need to move the mat that you keep the equal gap on the left and right hand side. Please note that the ramps fit from the centre of each tile.

Generally there is no need to secure the Motomat ramp unless it will be exposed to prolonged direct sunlight, which may cause the ramp to become displaced as it softens we would suggest that you glue down using a high temperature contact adhesive.

We now suggest that you leave the floor to settle for 24 hours before commencing final cutting and fitting of tiles around your perimeter. Generally the tiles that you cut to size from the left of the garage, the offcut can be used on the right hand side of the garage.



When measuring the tiles to cut we would suggest that you use three measuring points on each tile.

If cutting the tiles with a knife make sure it has a sharp blade. It is better to make several light scoring cuts rather than one heavy cut.

If the tiles are to continue through a doorway into an adjacent area we would recommend that these tiles are glued down.

When fitting the tiles allow a minimum 5mm expansion gap between the floor and fixed points like walls or piers to allow for any slight expansion or contraction due to temperature changes.



Instead of using a caulk at the expansion gap around the perimeter consider using Mototile skirting, with its hidden fixing, which can be matched or contrasted with the colour of your tiles.

If you are making a picture frame effect you will need to mitre the ramps at each corner, you will find a line on the reverse of the ramp to cut down for internal and external cuts



Mototile Seamless Light Duty

Please ensure that you start with the fixing tab facing the door opening so that tiles can interlock with the Mototile seamless ramp system.

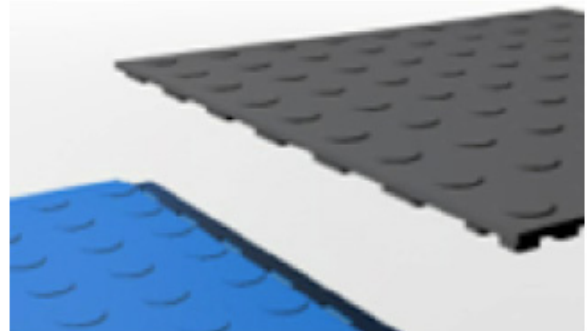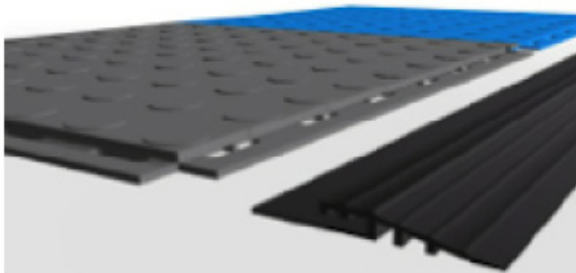

Please do not force the tiles together, offer up the corner of the tiles and using the non-marking rubber mallet tap the joints together gently, if tiles are not locking together without a lot of force then they may not be properly aligned or you are doing something wrong.

You should leave an equal gap on the left hand side and the right hand side before the wall.

We suggest that you do a complete row across the width of your garage first, then work towards the rear of the garage in a left to right manner completing each row fully before commencing the next row, don't forget to leave an equal gap on both sides for the cut tiles to be fitted to later.

There is no hard and fast rule whether you install the ramp first or last, however the advantage of installing the ramp at the end but before doing final cuts is that it then allows you to physically move the complete mat (2 people generally required) to align in case the walls are not square, please ensure that if you do need to move the mat that you keep the equal gap on the left and right hand side.

You are now ready to secure the ramp by drilling and screwing with counter sunk screws or glue down using a high temperature contact adhesive. The ramp is 2500mm long if your opening is wider than this we do not recommend that the join between ramps is in a position where the tyre will pass over it.

We now suggest that you leave the floor to settle for 24 hours before commencing final cutting and fitting of tiles around your perimeter. Generally the tiles that you cut to size from the left of the garage, the offcut can be used on the right hand side of the garage.

When measuring the tiles to cut we would suggest that you use three measuring points on each tile.



If cutting the tiles with a knife make sure it has a sharp blade. It is better to make several light scoring cuts rather than one heavy cut.


Consider creating a cardboard template from the boxes the tiles came in for any difficult shaped cuts.

If the tiles are to continue through a doorway into an adjacent area we would recommend that these tiles are glued down, consider undercutting wooden door jambs by sliding the tiles underneath for a neater finish.

When fitting the tiles allow a minimum 5mm expansion gap between the floor and fixed points like walls or piers to allow for any slight expansion or contraction due to temperature changes.

Instead of using a caulk at the expansion gap around the perimeter consider using Mototile skirting, with its hidden fixing, which can be matched or contrasted with the colour of your tiles.

If you are making picture frame effect you would need to look at our Motolock or Motomatt Range were ramps can be mitred.

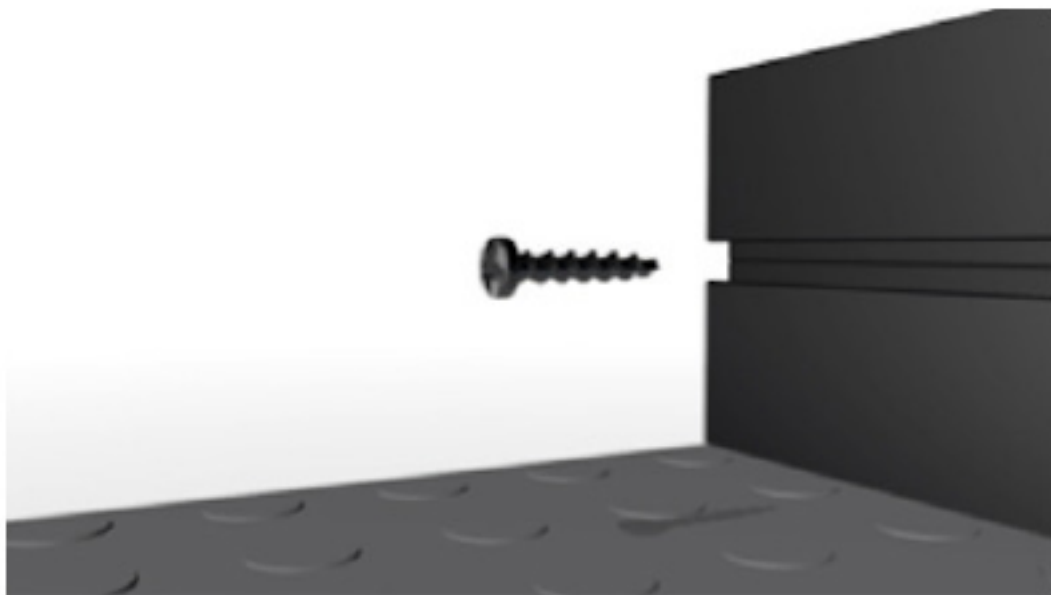

Mototile - Skirting